

Warning:

This appliance is not intended for use by persons (including children) whose physical, sensory or mental capabilities may be different or reduced, or who lack experience or knowledge, unless such persons receive supervision or training to operate the appliance by a person responsible for their safety.

 
Consult a qualified electrician or service agent if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.

If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or similar qualified person in order to avoid hazard.

Children should be supervised to ensure that they do not play with the appliance.

decohome 

AUTOMATIC WASHING MACHINE

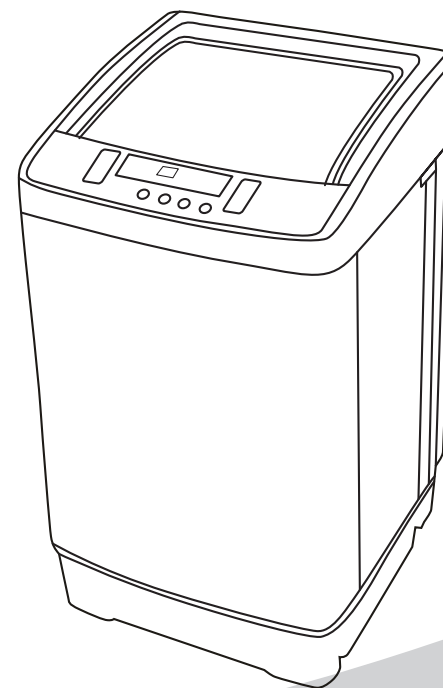

DGFAWSH03

INSTRUCTION MANUAL

Catalog

Read Before Use

Install Guide

Parts List Guide	1
Notice	2
Installation	4
Further Adjustments	6

Usage Guide

Pre-wash	8
Programming and Features	9
Wash and Spin	10
Post-wash	11

<u>Troubleshooting...</u>	12
---------------------------------	----

Please pay attention to safety instructions



This product belongs to class I appliance, please pay attention to electrical safety when in use!

SAFETY REQUIREMENTS

Ensure that servicing is done by factory authorized service personnel, to minimize product damage or safety issues.

GROUNDING INSTRUCTIONS

This appliance must be grounded. Grounding reduces the risk of electrical shock by providing an escape wire for the electrical current.

This appliance has a cord that has a grounding wire with a 3-prong plug. The power cord must be plugged into an outlet that is properly grounded.


If the outlet is a 2-prong wall outlet, it must be replaced with a properly grounded 3-prong wall outlet. The serial rating plate indicates the voltage and frequency the appliance is designed for.

Troubleshooting

Error Digital Display Information	Error Reason	How to fix
E1 – Water Inlet Fault	<ul style="list-style-type: none"> ● Incoming water has taken over 20 minutes to reach water level. ● The Inlet Valve is blocked or obstructed. ● The Water supply is cut off or the stopcock is open. 	<ul style="list-style-type: none"> ● Check the reason for low water pressure, open and close the cover 1 time to restart operation. ● Remove the blockage from the inlet valve, once done open and close the cover 1 time to restart operation. ● Turn on the water supply or stopcock, once done open and close the cover 1 time to restart operation.
E2 – Drainage Fault	<ul style="list-style-type: none"> ● Water drainage has taken over 5 minutes. ● Drain valve blocked, damaged or faulty. ● Drain pipe is damaged. 	<ul style="list-style-type: none"> ● Reposition the drain pipe for a more smooth water drainage, once done open and close the cover 1 time to restart operation. ● Remove the blockage from the drain valve, once done open and close the cover 1 time to restart operation.
E3- Top Cover Fault	<ul style="list-style-type: none"> ● The cover is open during use. 	<ul style="list-style-type: none"> ● Close the cover.
E4 – Spin Fault	<ul style="list-style-type: none"> ● Clothes are not level or balanced. ● The machine is standing at an incline. 	<ul style="list-style-type: none"> ● Reposition the clothes in the tub so they are balanced and level and close the cover. ● Place the washing machine on a level surface, once done please open and close the cover.
E5 – Water Level Fault	<ul style="list-style-type: none"> ● Water level sensor fault. ● Water Leakage. ● Harness contact is loose. ● Airway tube is loose. 	<ul style="list-style-type: none"> ● Unplug the machine, wait 10 seconds and replug the machine. If issue continues set water level to normal and restart the machine.
E6 – Child Protection	<ul style="list-style-type: none"> ● Machine is Child locked but the cover has been opened. 	<ul style="list-style-type: none"> ● Ensure that your child is a safe distance from the machine and close the cover.
Remarks	If unsolved the problem after use above methods, please contact maintenance dept and professional maintenance personnel, customer can not assemble or disassemble.	

Parts and Bom

 Read Before Use

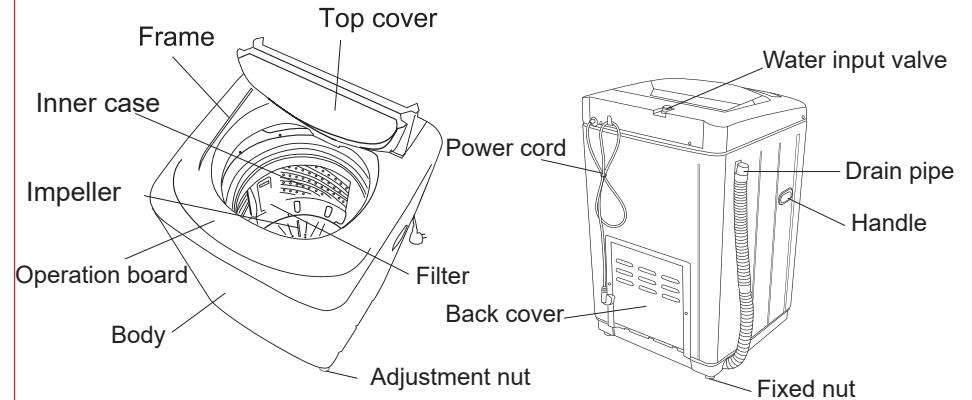

Symbol Notice:


	All operation with this mark must operate strictly as instruction requirements, or it may cause machine damage or endanger users' life.
	All behavior with this mark is absolutely prohibited or it may cause machine damage and endanger the users life.

Accessory

--	--

Notice: Please Read Before Use

 Please connect power plug of the machine to the designed electrical 220V socket separately. Do not attach to adapters.




When the machine is in normal use, please keep the machine plugged in. During a power outage or if the machine is not being intended for use, it should be unplugged and the water tap turned off. Please don't unplug or plug the machine with wet hands.



Do not obstruct the power cord, damaged the power cord, put any items on top of the power cord or bend the cord to improper angles. When the power cord or power plug is damaged, it must be repaired by specialist maintenance. Tampering with the cable will void all guarantees.



 Don't place the machine in the bathroom or other damp place, and do not put the wet clothes on the operation board. This may let water into the PCB board which may cause an electrical fire.

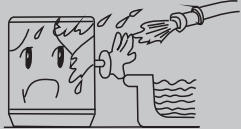


Do not use water at a temperature of more than 122F.



Please ensure that the vents at the bottom of the machine are well ventilated. Take care especially when placing machine on the carpet.

 vent on the bottom of washing machine

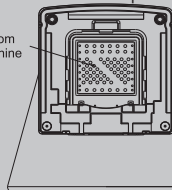


soft carpet



Don't wash raincoats or waterproof clothing, such as a bicycle covers etc. This will cause such items to be damaged.



 Don't share a socket with other appliances. If the power plug is damaged or the socket is loose, please do not use and have it repaired by a professional.

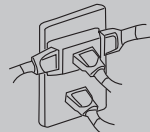

Post-wash

Usage guide

- Each month please clean the Impeller filter to ensure the best performance.
- During clean up, please unplug the power plug from the socket

 
Filter cleaning

- Must use filter when washing
- Please clean up filter timely


1. Take off the filter
See the pic.

2. Clean the filter

3. Hold on the handle of filter and press on the bottom to put it in.

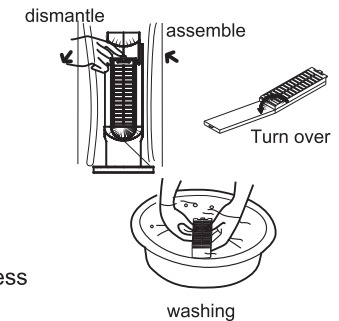

 Clean the water inlet filter by brush every 2 months



Use wet soft cloth to wipe the dirt on the body

 
1. Don't directly flushing
2. Use neutral detergent to wipe
3. Don't use thinner, oil, alcohol to wipe



1. Turn off the tap when finished washing
2. Please do not leave water in the machine, drain immediately after wash
3. Always unplug the machine when cleaning or troubleshooting
4. Hang the power cord and drain pipe on the hook
5. Wipe wet surfaces and inner case with a soft clean cloth. To dry, leave the lid open for about an hour and then close

Wash and Spin

Usage guide

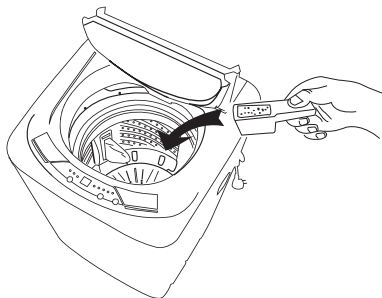

How to use laundry detergent

- Once the water has reached the water level, put the right amount of detergent into the container; slowly pour the powder into the tub. Allow at least 30 seconds to ensure an even dissolve or use the soak function for best results.
- Put in clothing and select suitable water level.
- Clothes with color or patterns are easy to rub off, please read the label before you wash your clothes. Please ensure that you wash whites, with whites only and colors with other colors. Do not mix (if you don't want your whites to no longer be whites! However if you do we suggest you use red for a nice light pink.)

Use laundry detergent in moderation

We recommend that you do not use a high foaming detergent, as it will no doubt make a mess and in extremely high dosages may even enter the control panel and destroy the appliance.

 
Laundry detergent dosage should refer to the detergent instructions.

How to use bleach

- Once the water has reached the water level, put the right amount of washing bleach into the container; slowly pour the powder into the tub.
- Clothes with color or patterns are easy to rub off, it should be avoided also to use bleach. Please ensure you wash whites, with whites only and colors with other colors. Do not mix (if you don't want your whites to no longer be whites. However if you do we suggest you use red for a nice light pink).
- Bleach should not direct contact with the washing.
- Use of bleach method and usage according to bleach instruction.
- Powder type bleach should be melted before using.
- Please note that it is not advisable to use bleach in washing clothes due to potential skin irritations etc.

Please note:

- There is a period of time to start spin dry even if there is no water in the tub.
- Clothing with colors may easily rub off and must be washed separately from other clothes.
- If the water is below the minimum water level the impeller will not turn.

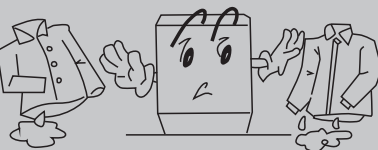


Notice: Please Read Before Use

When washing machine is on working, don't put hands into the inner case. And don't let child climb upon the washing machine.



 
Do not dismantle, repair and rebuild the machine on your own!

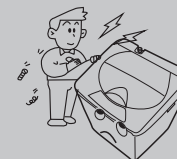


Don't place any hot or heavy objects (such as a pot of hot water) on the washing machine.



 Don't wash clothes that with volatile substances (thinner, gasoline, etc.).

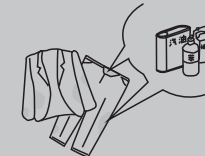

 
Do not Leave Children without supervision. Certain disabilities, illnesses, persons on medication that can cause dizziness or hallucinations as a side effect, or the intoxicated may not use this.



Do not put under direct sunlight; do not put the appliance close to a heating heat source, etc.



 Filter must be intact and installed correctly.



- Before washing or spinning laundry, please check that all foreign matters are out of the pockets or not wrapped in blankets (such as coins, keys, headphones, batteries, sand, hairpins etc).



- Before Laundry, Please check whether the tap open or not and water pipe connect or not.
- Suggest use low foam detergent.

Installation

 
Read Before Use

Please install and adjust the washing machine according to the requirement of the specifications, this is very important for your safety and correctly use the washing machine.

Install the rat guard

1. Install in front way

Opened the package, put the washing machine back down gently on soft surface (such as terry cloth, carpet), Insert the rat guard from front to back and you can hear a crack click when it installed in place. Then gently lift it up like the Picture.

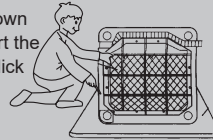

2. Install in back way

Opened the package, put the washing machine back down gently on soft surface (such as terry cloth, carpet), Insert the rat guard from back to front and you can hear a crack click when it installed in place. Then gently lift it up like the Picture.

 


Adjust the Installation position


Please leave more than .75 inch between washing machine and the wall, maximum slope Angle is 2° on bearing surface. Ground tilt or uneven may cause washing machine running unstable or stop in midway, please use the following method to adjust:

● Determine horizontal

Use a bubble level tool or a free bubble level mobile phone app to confirm whether the washing machine is horizontal. If you do not have access to either place a straw or needle on the machine and see if it rolls.




 Before installation, remove the bottom foam and plastic stent.



● Adjust the adjustable nut

 1. Lift up the machine adjustable side, loosen the adjustable nut, rotate it and make machine horizontal.
2. After stable adjustment, tighten the adjustable nut.

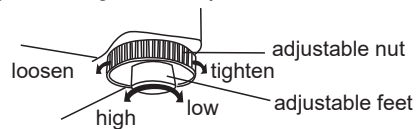

Programming and features

Usage guide



*The washing capacity means the maximum weight of washing or spinning for a wash.
*The thickness of the fabric, size or kinds, will affect the actual washing capacity.
*Do not select high water level when fabric weight is below 2.2 lb
* Please select the high water level when you believe it is suitable. It will not clean clothes better if you use a high water level for a small amount of clothes so please try and save water.

The reference weight of washing

- work clothes about 1.75 lb
- Towel about 1.1 lb
- pajamas about 1.1 lb
- Shirt about .33 lb
- T-shirt about .44 lb
- jeans (about 11%) about .66 lb
- Blended fabric coat about .44 lb
- jacket about .33 lb
- single bed sheet about .24 lb
- underpants about .11 lb
- socks about .11 lb

Pre-wash

 
Usage guide



Please pay attention to the following before washing

Preparation before washing

1. Connect water pipe well, turn on the tap.
2. Plug into the socket
3. Put down the drain pipe

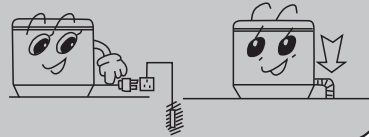

- a. Ensure there are no items in the clothes pocket (such as screw, coin etc.)
- b. Turn clothes inside out so that chip or line does not adhere to the surface of clothes during washing.
- c. When doing fine cleaning, like women's underwear with thin nylon and polyester materials, please put it into washing bag.
- d. Tighten loose belts in clothing and close zippers.
- e. Brush off mud and sand on clothing before washing.
- f. Clothes that easily float, please put it in the bottom. Additionally when floating, please stop and press it into the washing liquid.
- g. Please separate thick clothes and thin clothes when washing.
- h. Inappropriate to wash down jacket and clothing, if needed, please select the low water level and do single washing.
- e. DO NOT wash fur blankets and electric blankets.

Spin drying can lead to shrinkage and deformation of wool fabric.



1. Please don't use the spin function on wool.
2. DO NOT spin dry down jacket and other light weight but bulky clothing to avoid danger. Please check the washing label of your clothes item before you wash.

Notice



 
DO NOT wash fur blankets and electric blankets.

Installation

Read Before Use


How to change the drain pipe direction

Pull out from the right side of the groove

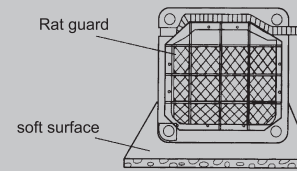


Pull out from the left side

 Press the drain pipe into the groove in this place

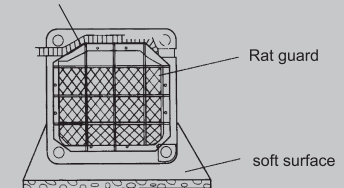

How to use drain pipe

 
The height of the drain pipe should be less than 10 cm or it may cause the drain not functioning properly midway through cycle




3. You can cut the drain pipe from the middle part if the pipe is too long and bevel cut the front side of the pipe can help drain fluently.



 4. If you need lengthen the pipe, please purchase another pipe (which length is not exceed 1.5m) and make sealing on connected part of two pipes.



 5. When pipe is too long please cut it from A or B

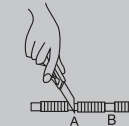


Further adjustments

Read Before Use


Connect water pipe with the washing machine

 1. Don't remove the sealing ring, and please check whether the sealing ring is off or damaged before every use.
2. Input pipes connect to the valve
3. Tighten the pipe nut and shake it to check whether it is suitable

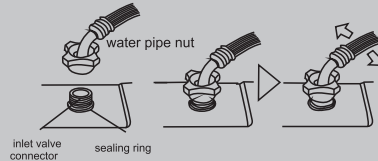


Connect pipe connector and water pipe

 The default standard connector of our product is a conventional faucet in the United States; if it cannot be used, please purchase suitable accessories to complete the assembly of the product.

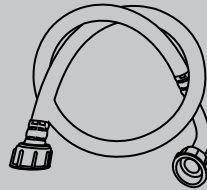


Check the connection between water pipe and tap

 1. Pull water pipe slightly to check whether it is tight.
2. Turn on the tap to check whether it is leaking.
3. Don't bend the water pipe
4. Please check the connection between water pipe and tap, to check whether the installation is tight or not before use.

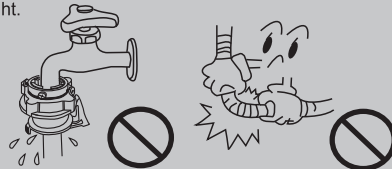

Dismantle the water pipe

 1. turn off the tap
 2. Press on the lock lever and slider then pull down the pipe.
- Tips: if use machine more than once a week, it is better to keep the pipe connector on




Further adjustments


Read Before Use

Check the tap

 Suitable tap




unsuitable tap


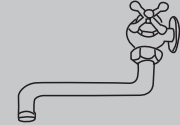 


The length of the front part is required more than 10mm
Tap mouth must be even, if not, please make it even and smooth to avoid leakage.

 
Connect method A

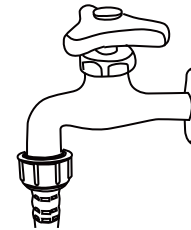

Connect method B

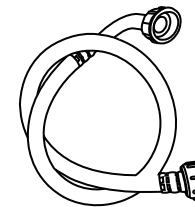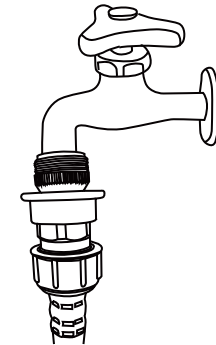  

O ring

 

part X



part Y



Manufacturer's 1-Year Limited Warranty

The manufacturer warrants that all parts and components are defect free in materials and workmanship for 1 year. This warranty is valid only in accordance with the conditions set forth below:

1. The warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated.
2. This limited warranty is the only written or express warranty given by the manufacturer. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.
3. This warranty gives you specific legal rights. You may also have other rights which vary by state

Procedure for Replacement or Return within the 1 Year:

To return the product for replacement or refund within the 1 year, the original purchaser must pack the product securely and send it postage paid with a description of the reason for replacement or refund, proof of purchase, and include your order number on the package, to the following address:

Deco Home
80 Carter Drive
Edison, NJ 08817

Other contact info

Phone: 844-413-2646

Customer Service Email: customerservice@decogear.com