

DECOGEAR®

34" WQHD Monitor



DGLUX340

Notices

Before using this product, please read this user manual carefully and keep it handy

- Keep the monitor away from water sources or damp places, such as bath rooms, kitchens, basements and swimming pools.
- Make sure the monitor is placed on a flat surface. If the monitor falls down, it may cause human injury or device damage.
- Store and use the monitor in a cool, dry and well ventilated place, and keep it away from emission and heat sources.
- Do not cover or block the vent hole in the rear casing, and do not use the product on a bed, sofa, blanket or similar objects.
- The range of the supply voltage of the monitor is printed on the label on the rear casing. If it is impossible to determine the supply voltage, please consult the distributor or local power company.
- If the monitor will not be used for a long period, please cut off the power supply to avoid electric shock in rainy days and damage due to abnormal supply voltage.
- Please use a reliable earthing socket, do not overload the socket, or it may cause fire or electric shock.
- Do not put foreign matters into the monitor, or it may cause short circuits resulting fire or electric shock.
- Do not disassemble or repair this product by self to avoid electric shock. If faults occur, please contact the after-sales service directly.
- Do not pull or twist the power cable forcedly.
- There is a polarizer layer (not a protective film) on the surface of the screen. Do not peel it off, or the product may be damaged and the warranty will be invalid.



Packing list

- Please check that the package of the monitor contains all parts. If any part is lost, please contact the distributor.
- The color and shape of parts may vary with models. Figures in this User Manual are for reference only.
- Cable supplied may vary with purchased products. Figures in this User Manual are for reference only.



 
Monitor



Stand



Base

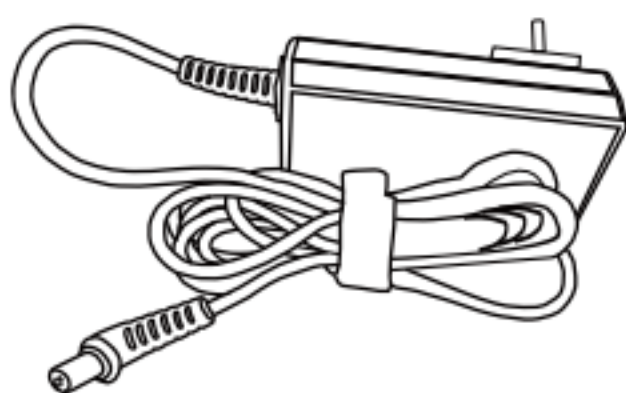

Power adapter x1



Screw x1



DP Signal Cable

 


Instructions


- Redundant screws can be used as spare screws.

Installation of base


Open the top foam. due to the curve monitor can not be press by force, please remain the monitor screen on the bottom curved foam before assembly finished.

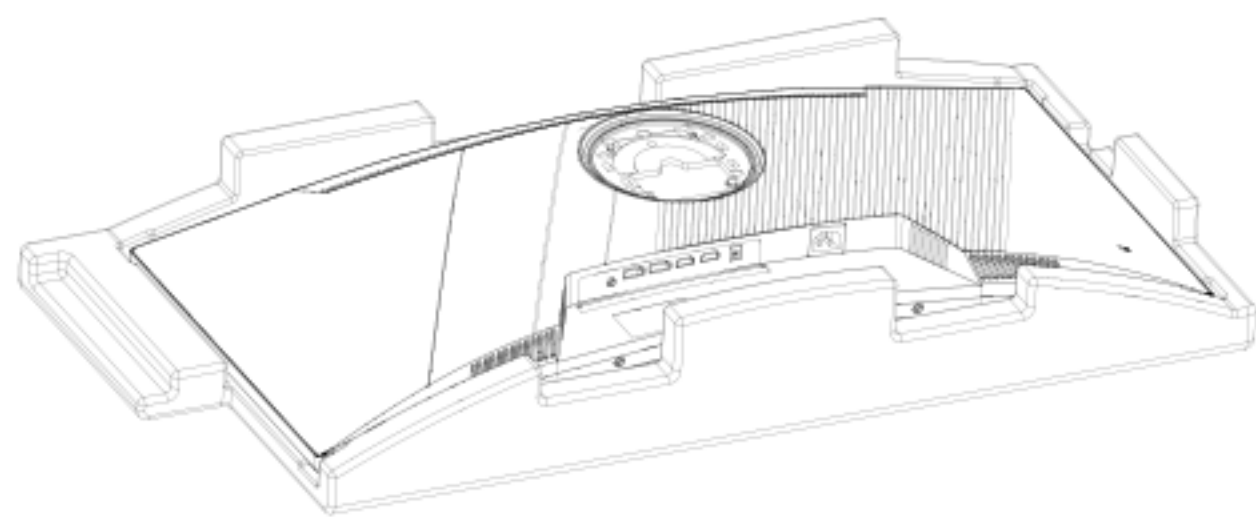

 
1. Use screws to lock the base to the stand and the installation is complete.

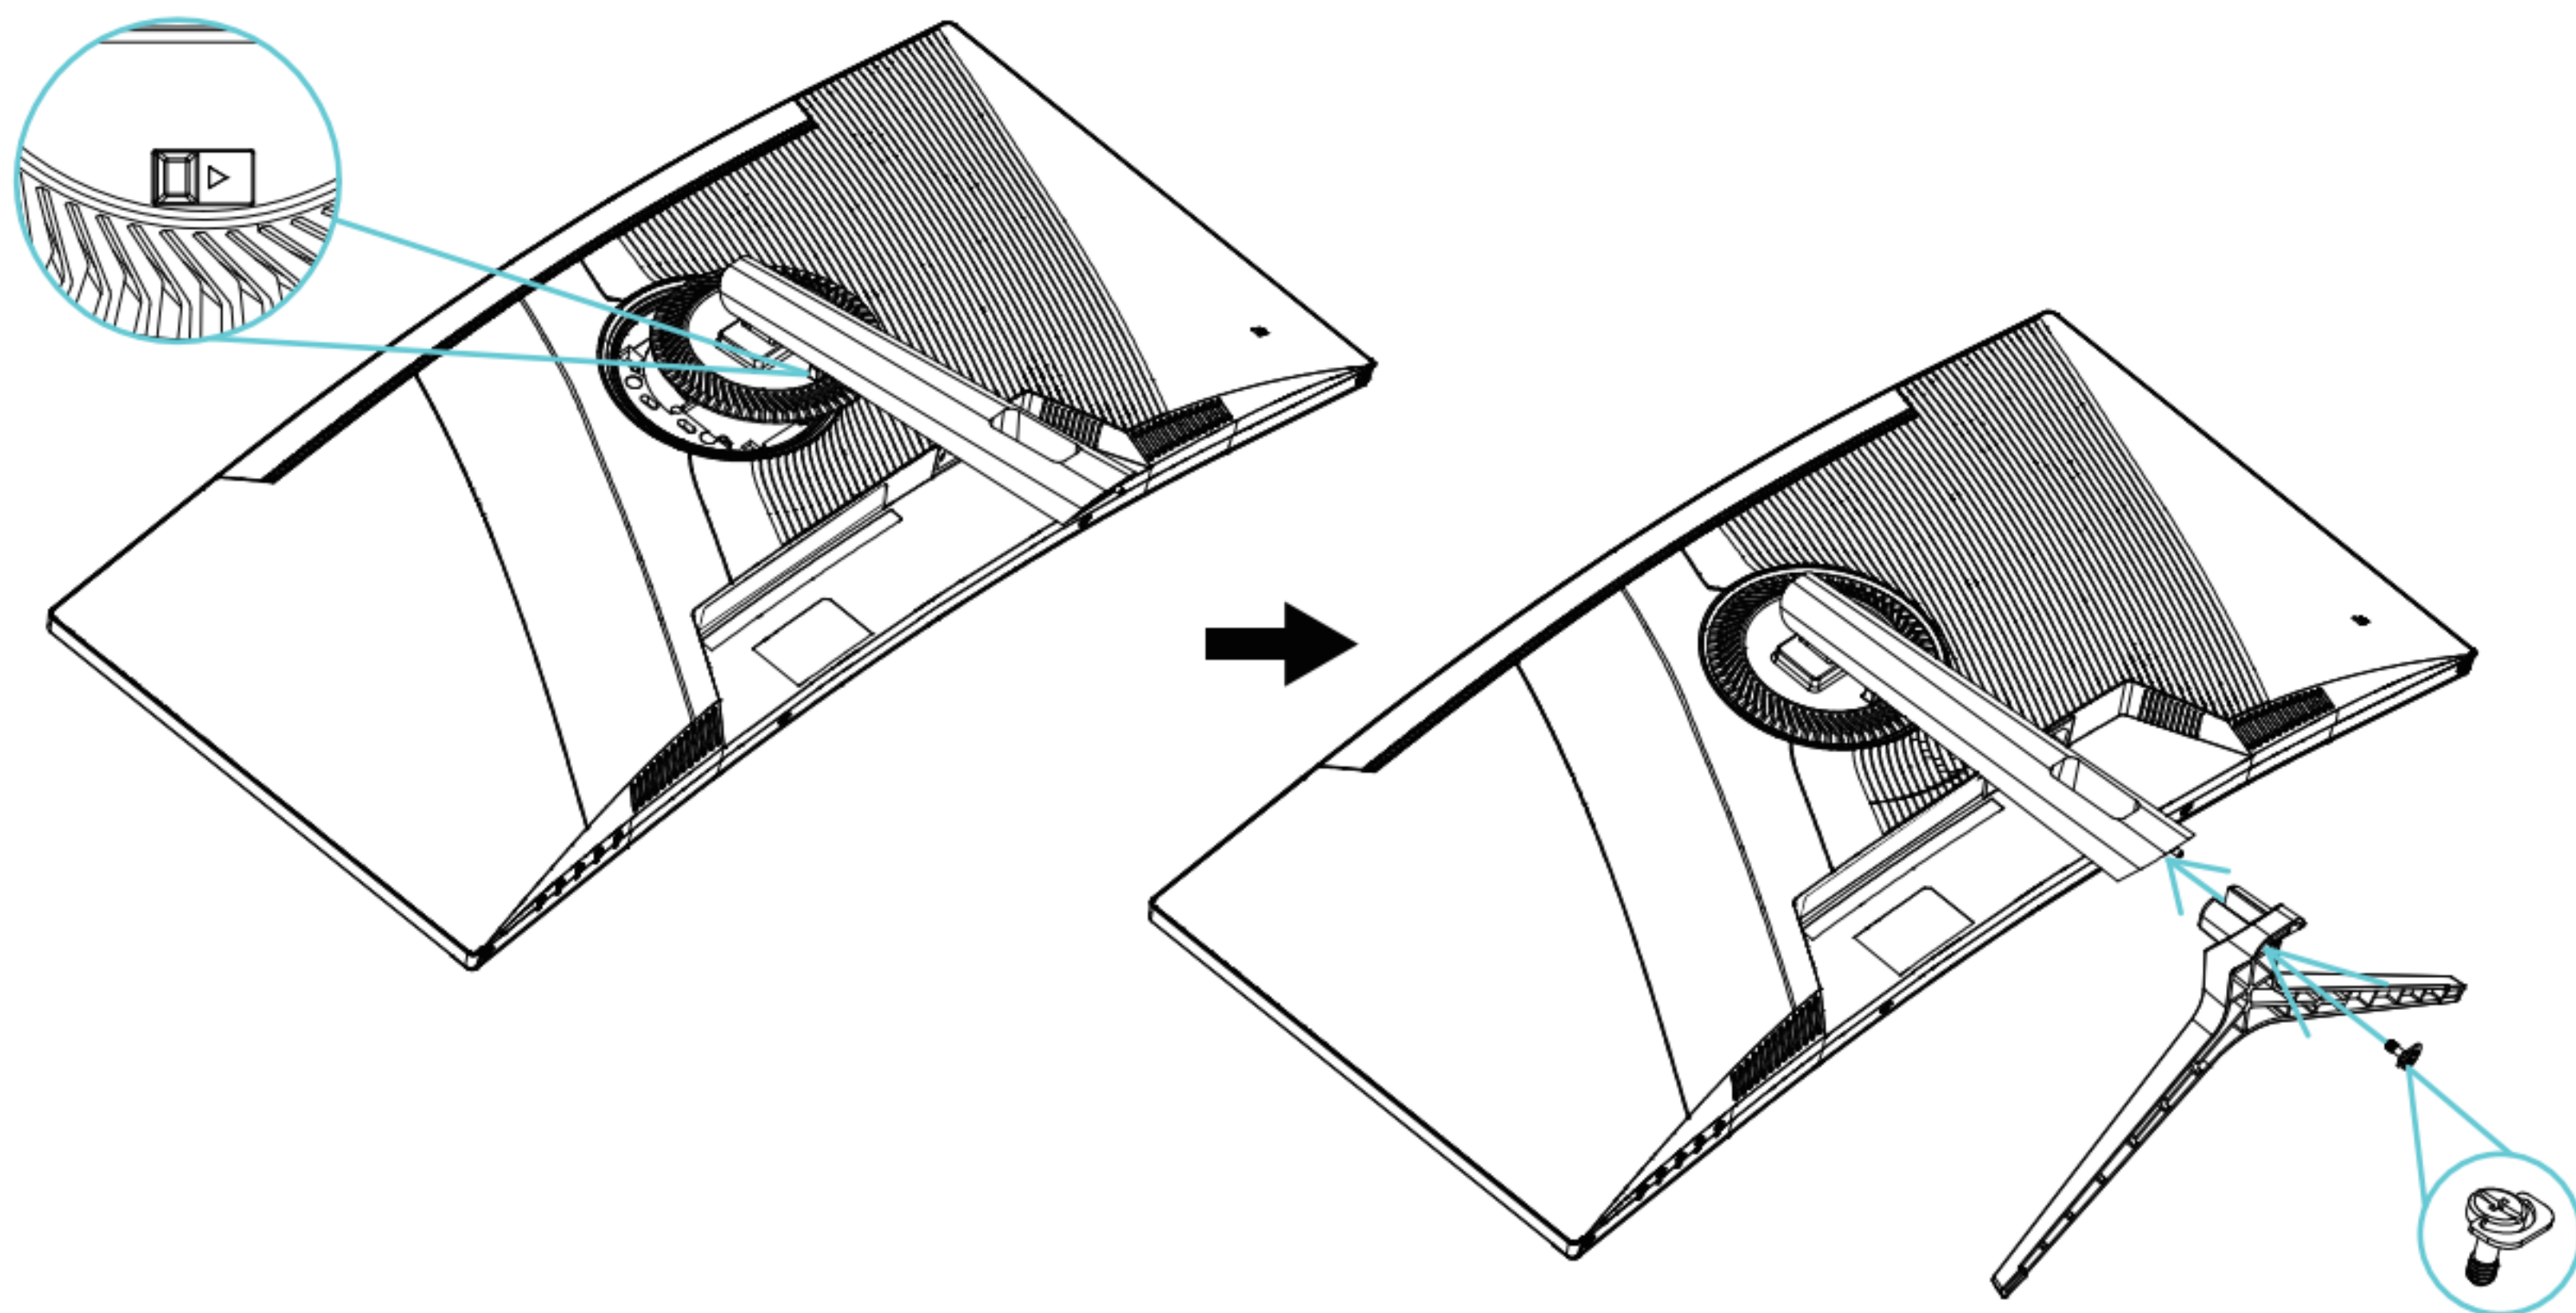


 2. After assembly, simply hold the stand with hand to stand the monitor upright.

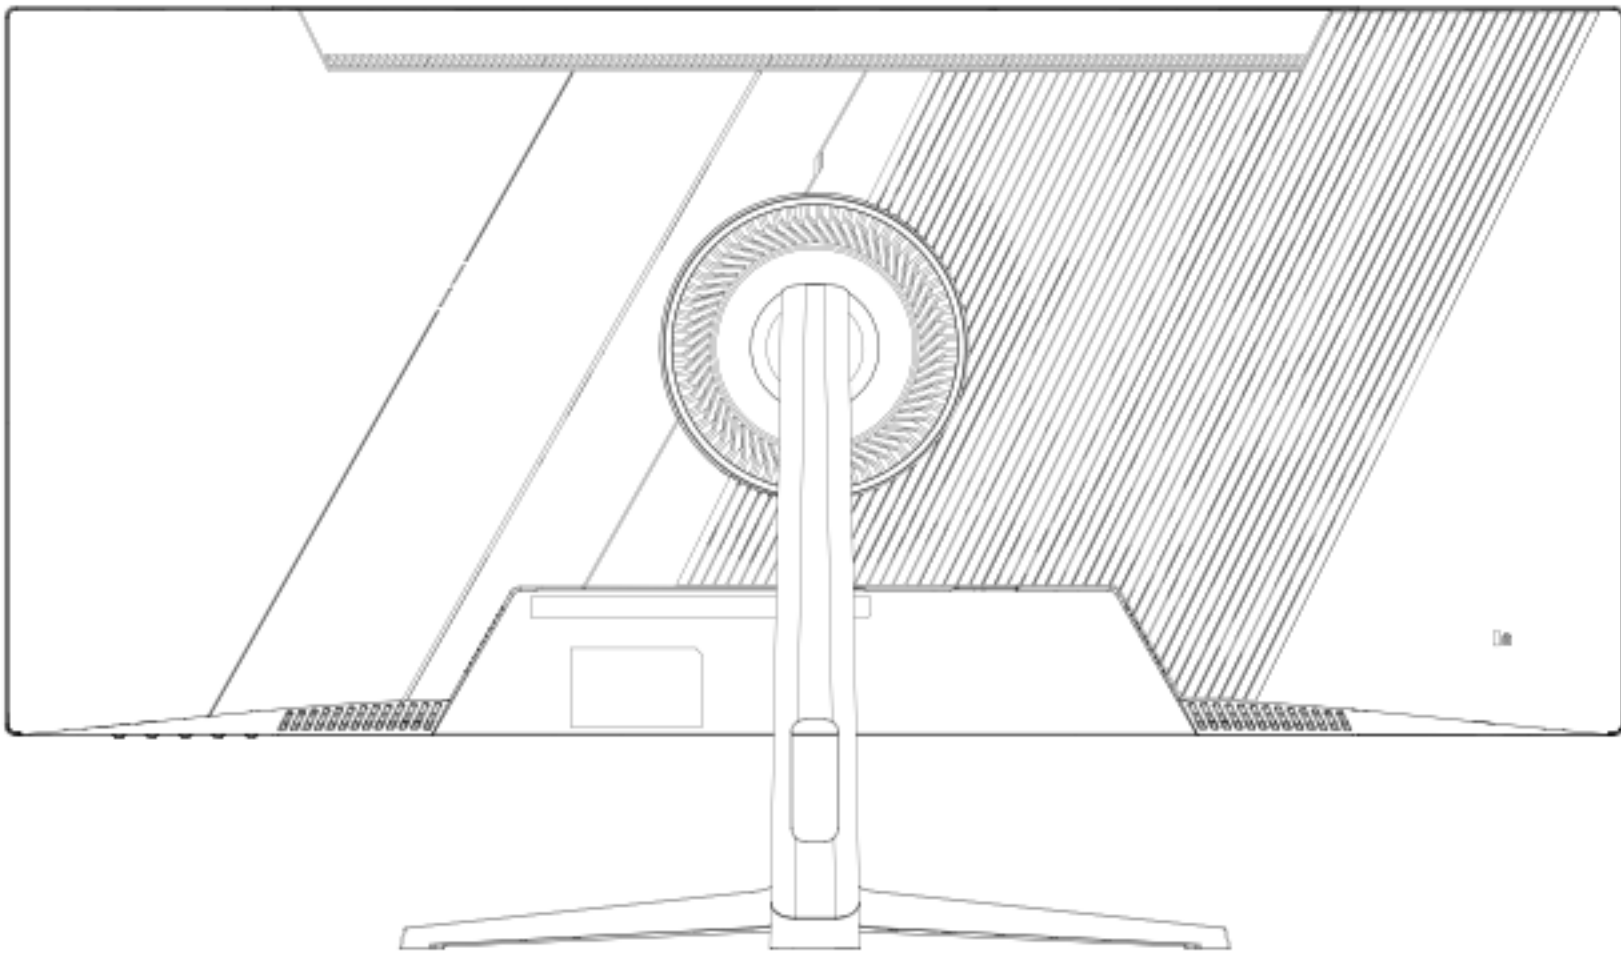


 Note: During standing of the whole monitor, do not press the liquid crystal screen with hand to avoid damage to the screen.

 
1.Take out the foam and monitor from package.

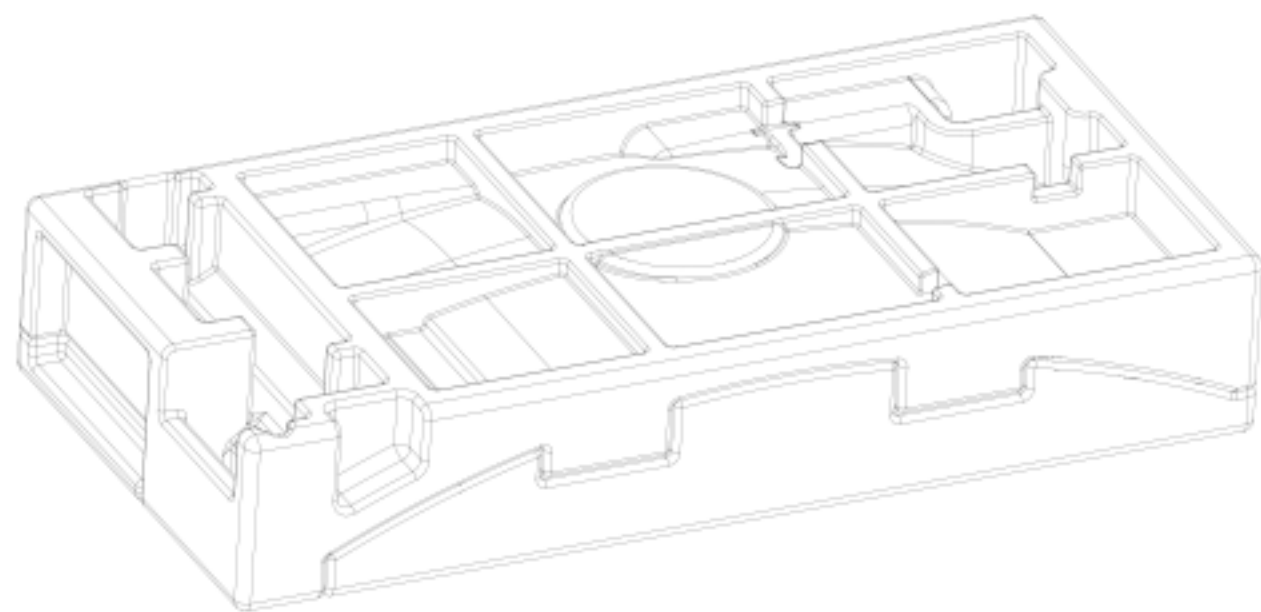

 
2.Open the top foam. due to the curve monitor can not be press by force, please remain the monitor screen on the bottom curved foam before assembly finished.

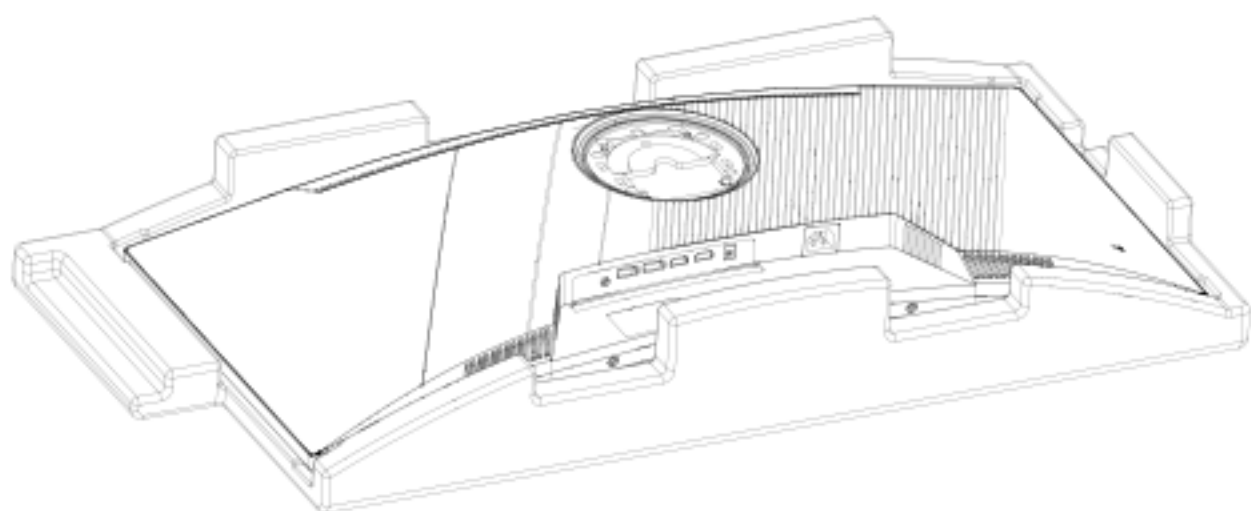


 3.Screw 4 pcs stud (stud spec: M4, hex standoff, length $\geq 12\text{mm}$) into vesa hole and then connect the wall mount with the 4 stud. Vesa standard is 75*75mm. (the stud and wall mount adaptor is not included in the package, please ask wall mount supplier for it)

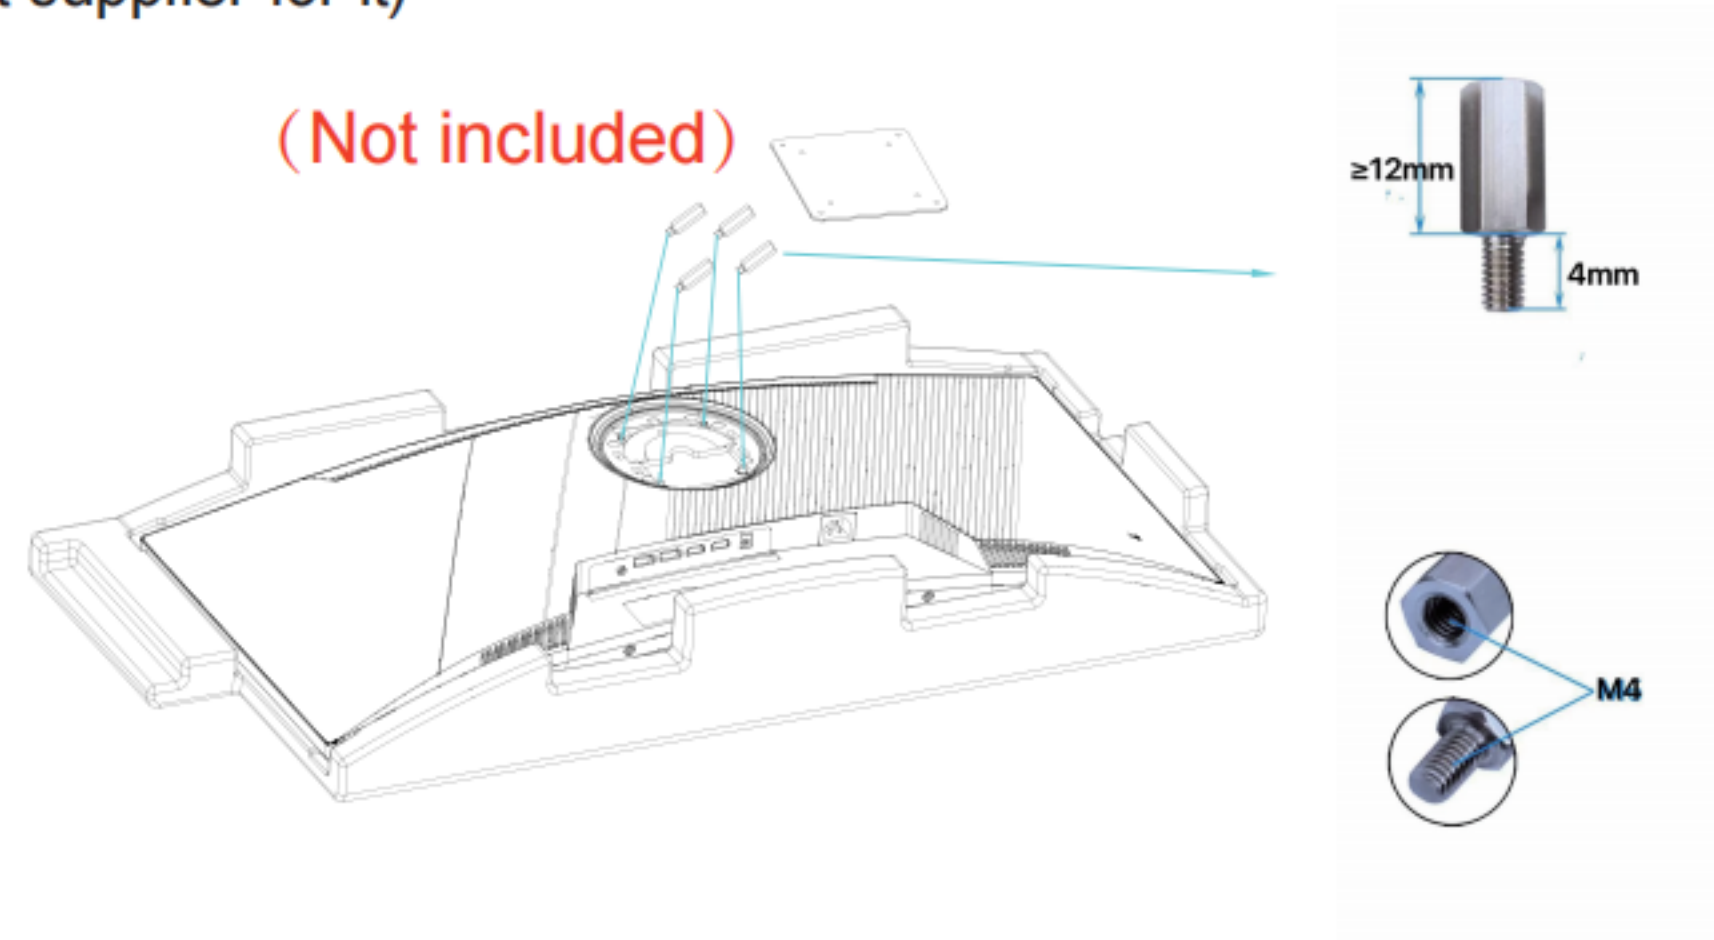

  
4.While installing, please do not pinch or press the screen to prevent damaging the screen.

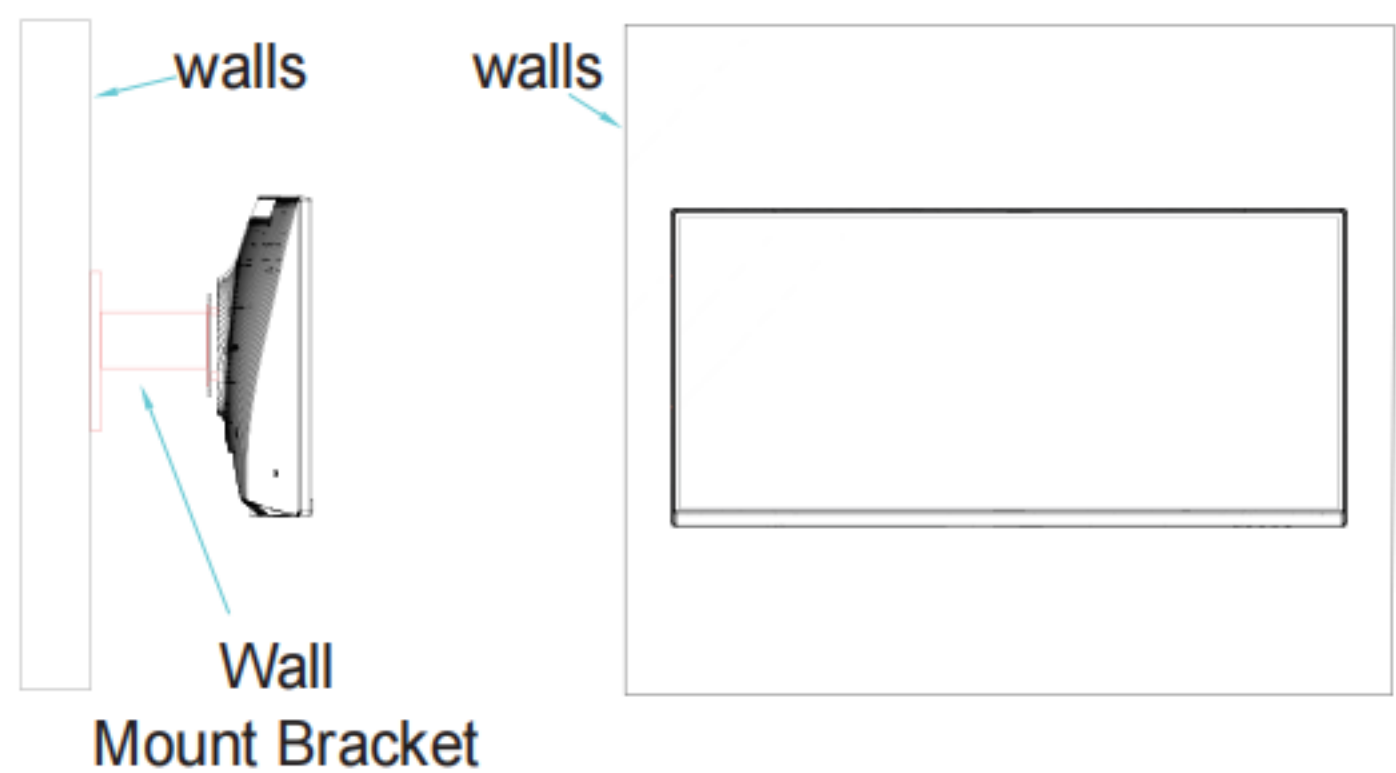

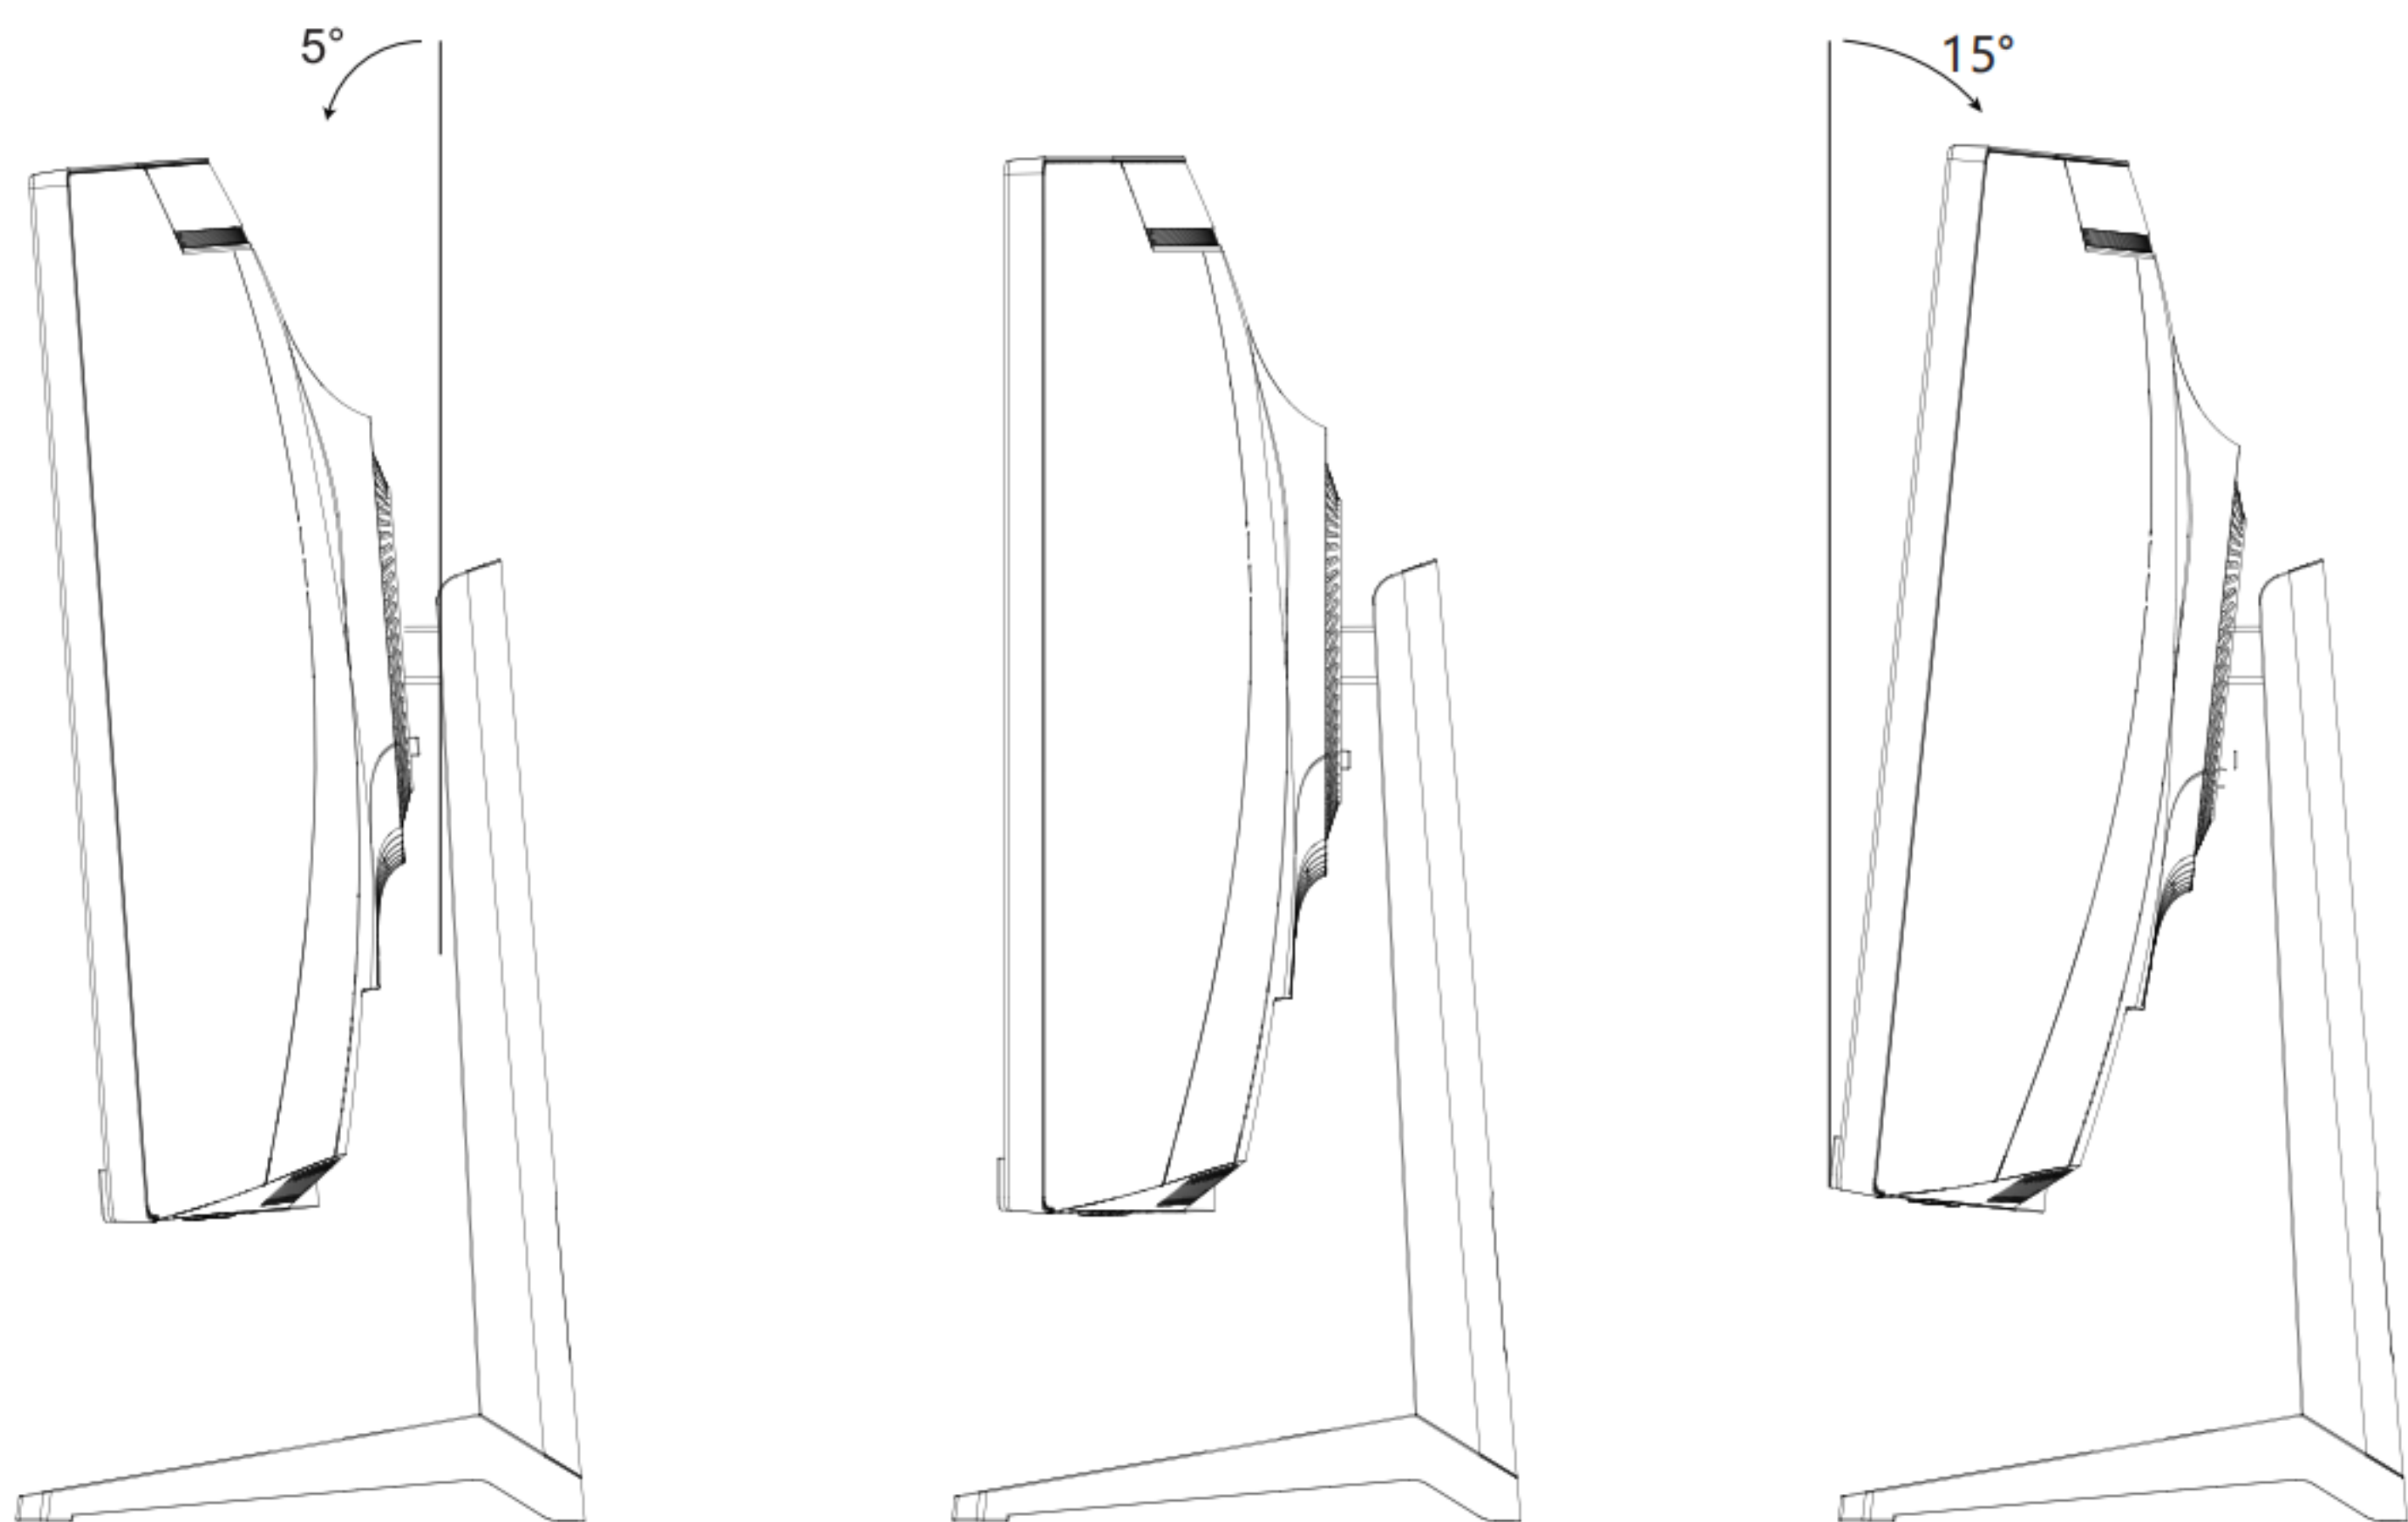

Tilting angle
-5° - + 15°

 
Description of buttons

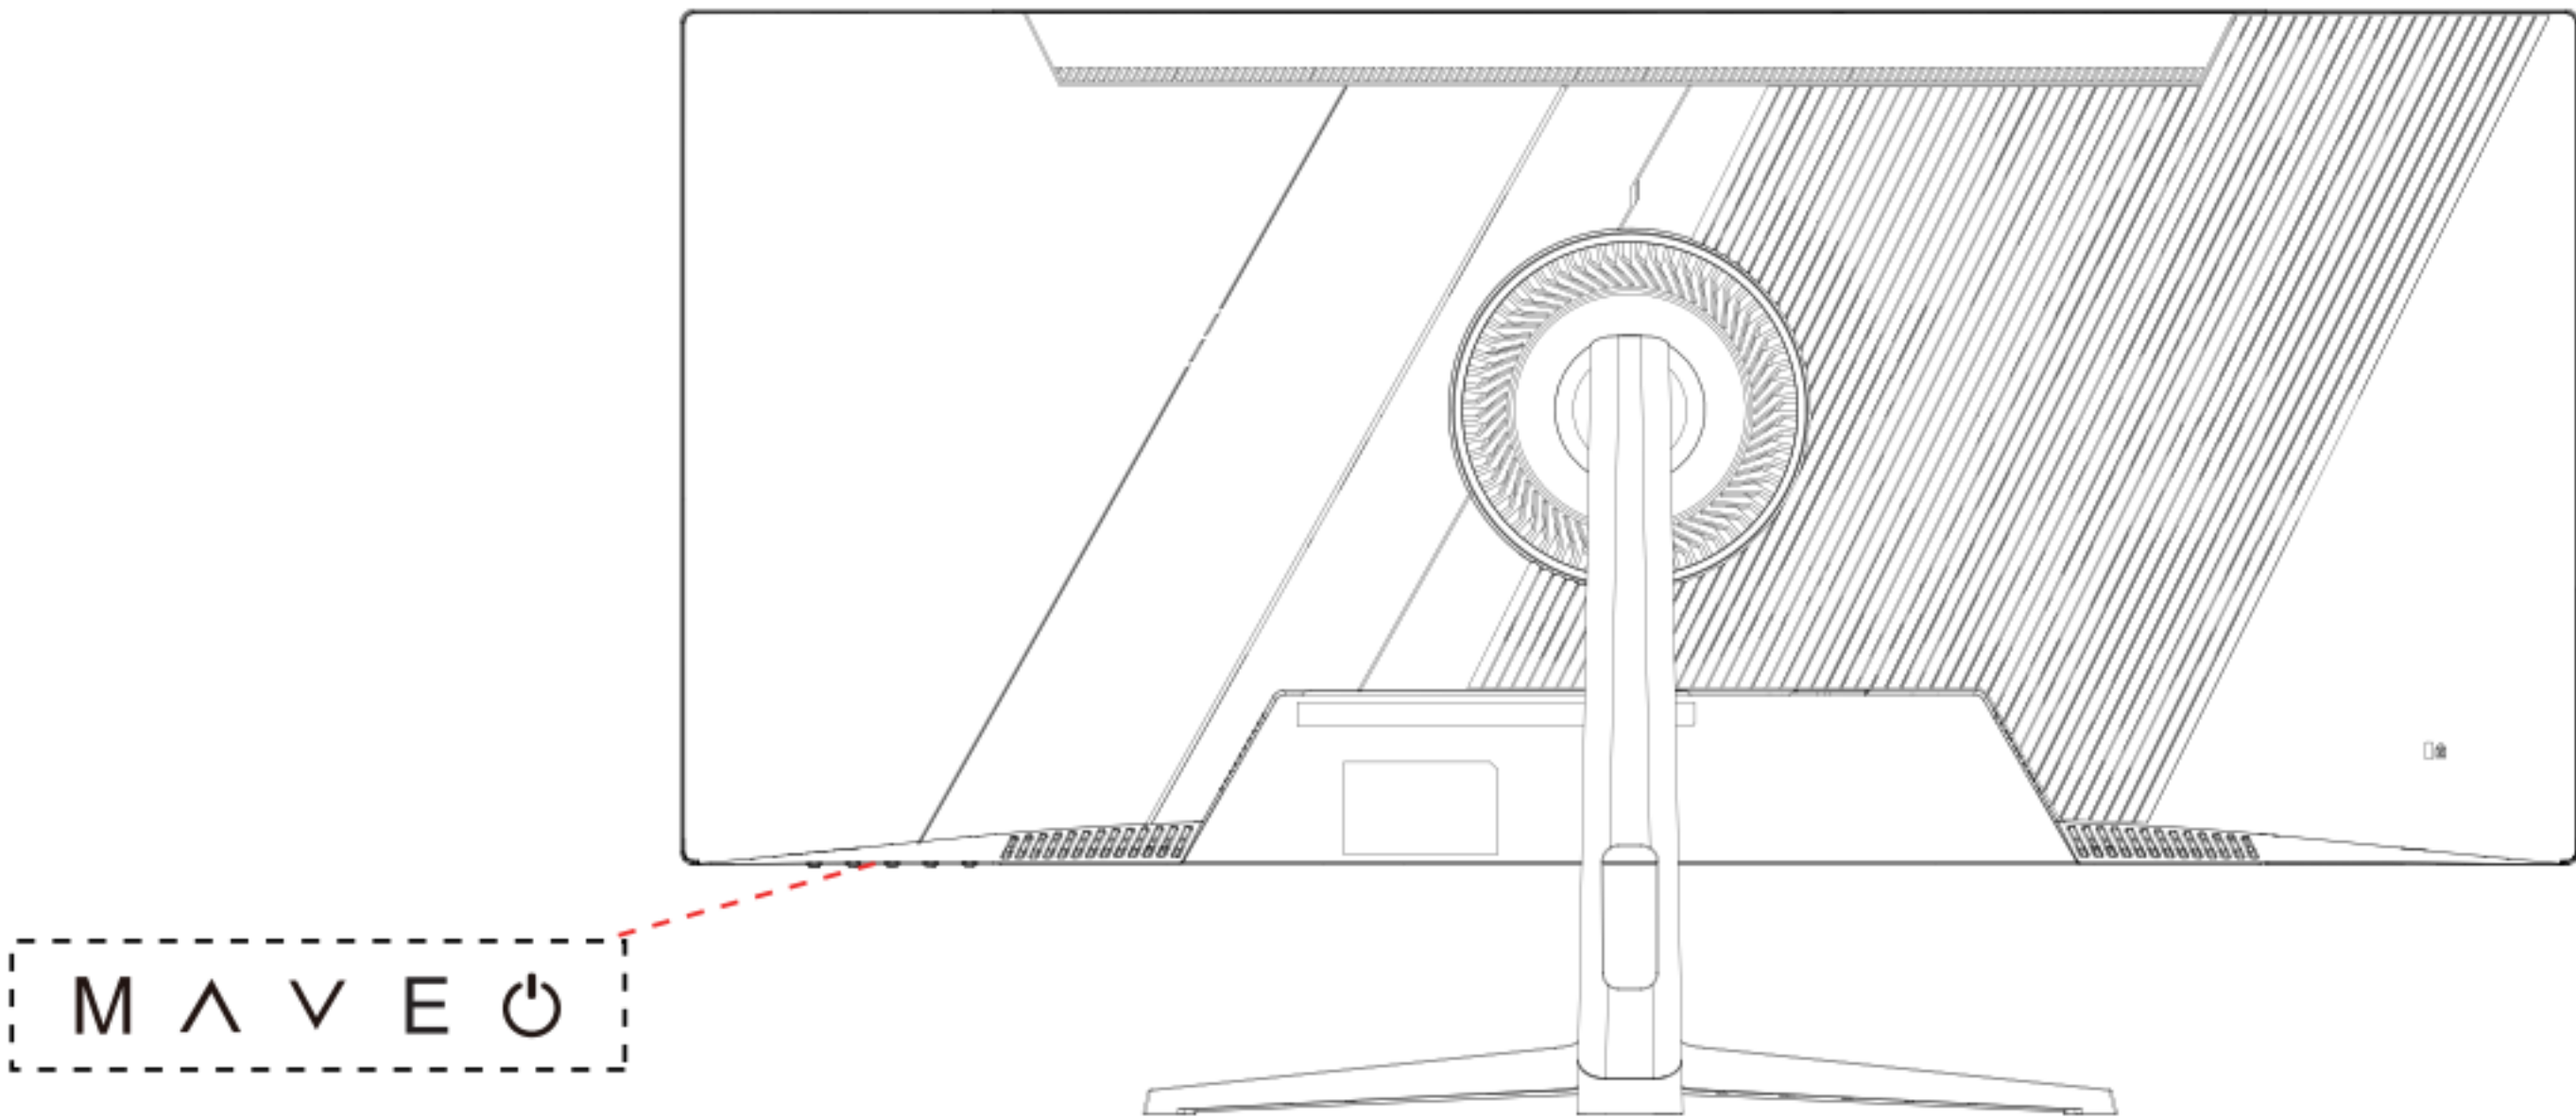

Usage of multifunctional button control key

M	Menu	Activate and confirm the OSD Menu
^	Preset Mode	Select items and adjust parameters upwards in the menu.
v	Signal Switch	Select items and adjust parameters downwards in the menu.
E	Back/Exit	When in the menu, go back or log out / Game Plus Crosshair.
	Power Button	Press once to switch on the power, press and hold for 3 seconds to switch off the power.

 Cable connection:

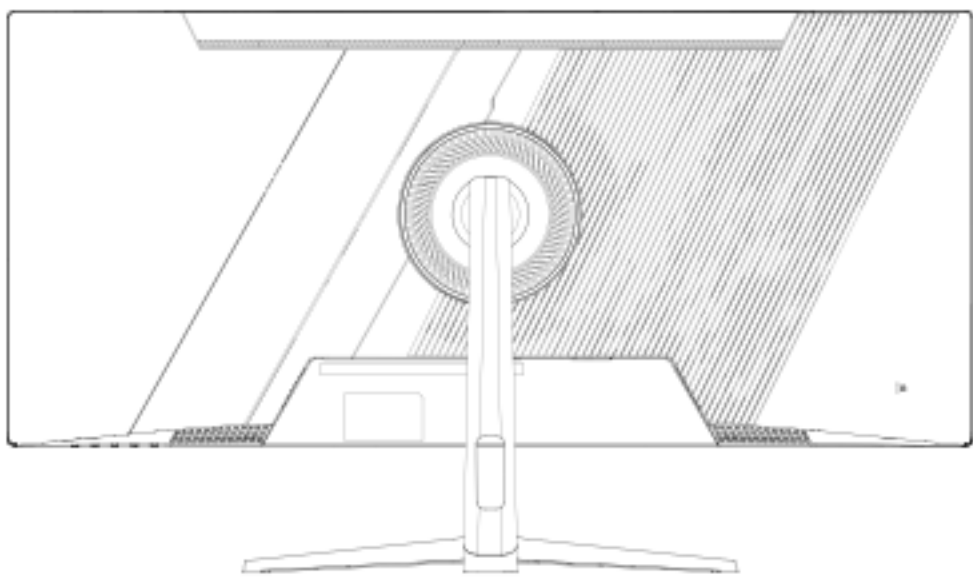

* The bottom interface configuration at the back of the monitor varie with products.
* Note: If the power cable or signal cable is damaged, you must replace it with special soft cables or special components purchased from the manufacture or maintenance department.

HDMI interface

Use the HDMI cable to connect the HDMI IN interface, of the product to the HDMI OUT interface of a PC.

A diagram showing an HDMI cable. One end of the cable is connected to a port on a PC tower labeled 'HDMI OUT'. The other end of the cable is connected to a port on the back of the monitor labeled 'HDMI IN'.

DP interface

Use the DP cable to connect the DP IN interface of the product to the DP OUT interface of a PC.

A diagram showing a DisplayPort (DP) cable. One end of the cable is connected to a port on a PC tower labeled 'DP OUT'. The other end of the cable is connected to a port on the back of the monitor labeled 'DP IN'.

AUDIO OUT

Connect audio outputting devices such as earphones to the AUDIO OUT interface.

A diagram showing an audio cable. One end of the cable is connected to a port on the back of the monitor labeled 'AUDIO OUT'. The other end of the cable is connected to either a pair of earphones or a pair of external speakers.

Power Adapter

Please connect the power adapter plug to the corresponding power port of the monitor, and connect the other end to a properly grounded power outlet.


A diagram showing a power adapter cable. One end of the cable is connected to a port on the back of the monitor. The other end of the cable is connected to a standard AC power outlet.

Menu description

- The color and shape of the OSD menu of the actual computer may be slightly different from them shown in the figure.
- Specifications of the OSD menu may change with improvements of functions without prior notice.

The screen display (OSD) menu can be used to adjust settings of the monitor and is shown on the screen after the monitor is powered on and the M button is pressed.

 1. Press one of the buttons (M ^ V A ⏻) to activate the browser screen.
2. Press M to enter the OSD screen.

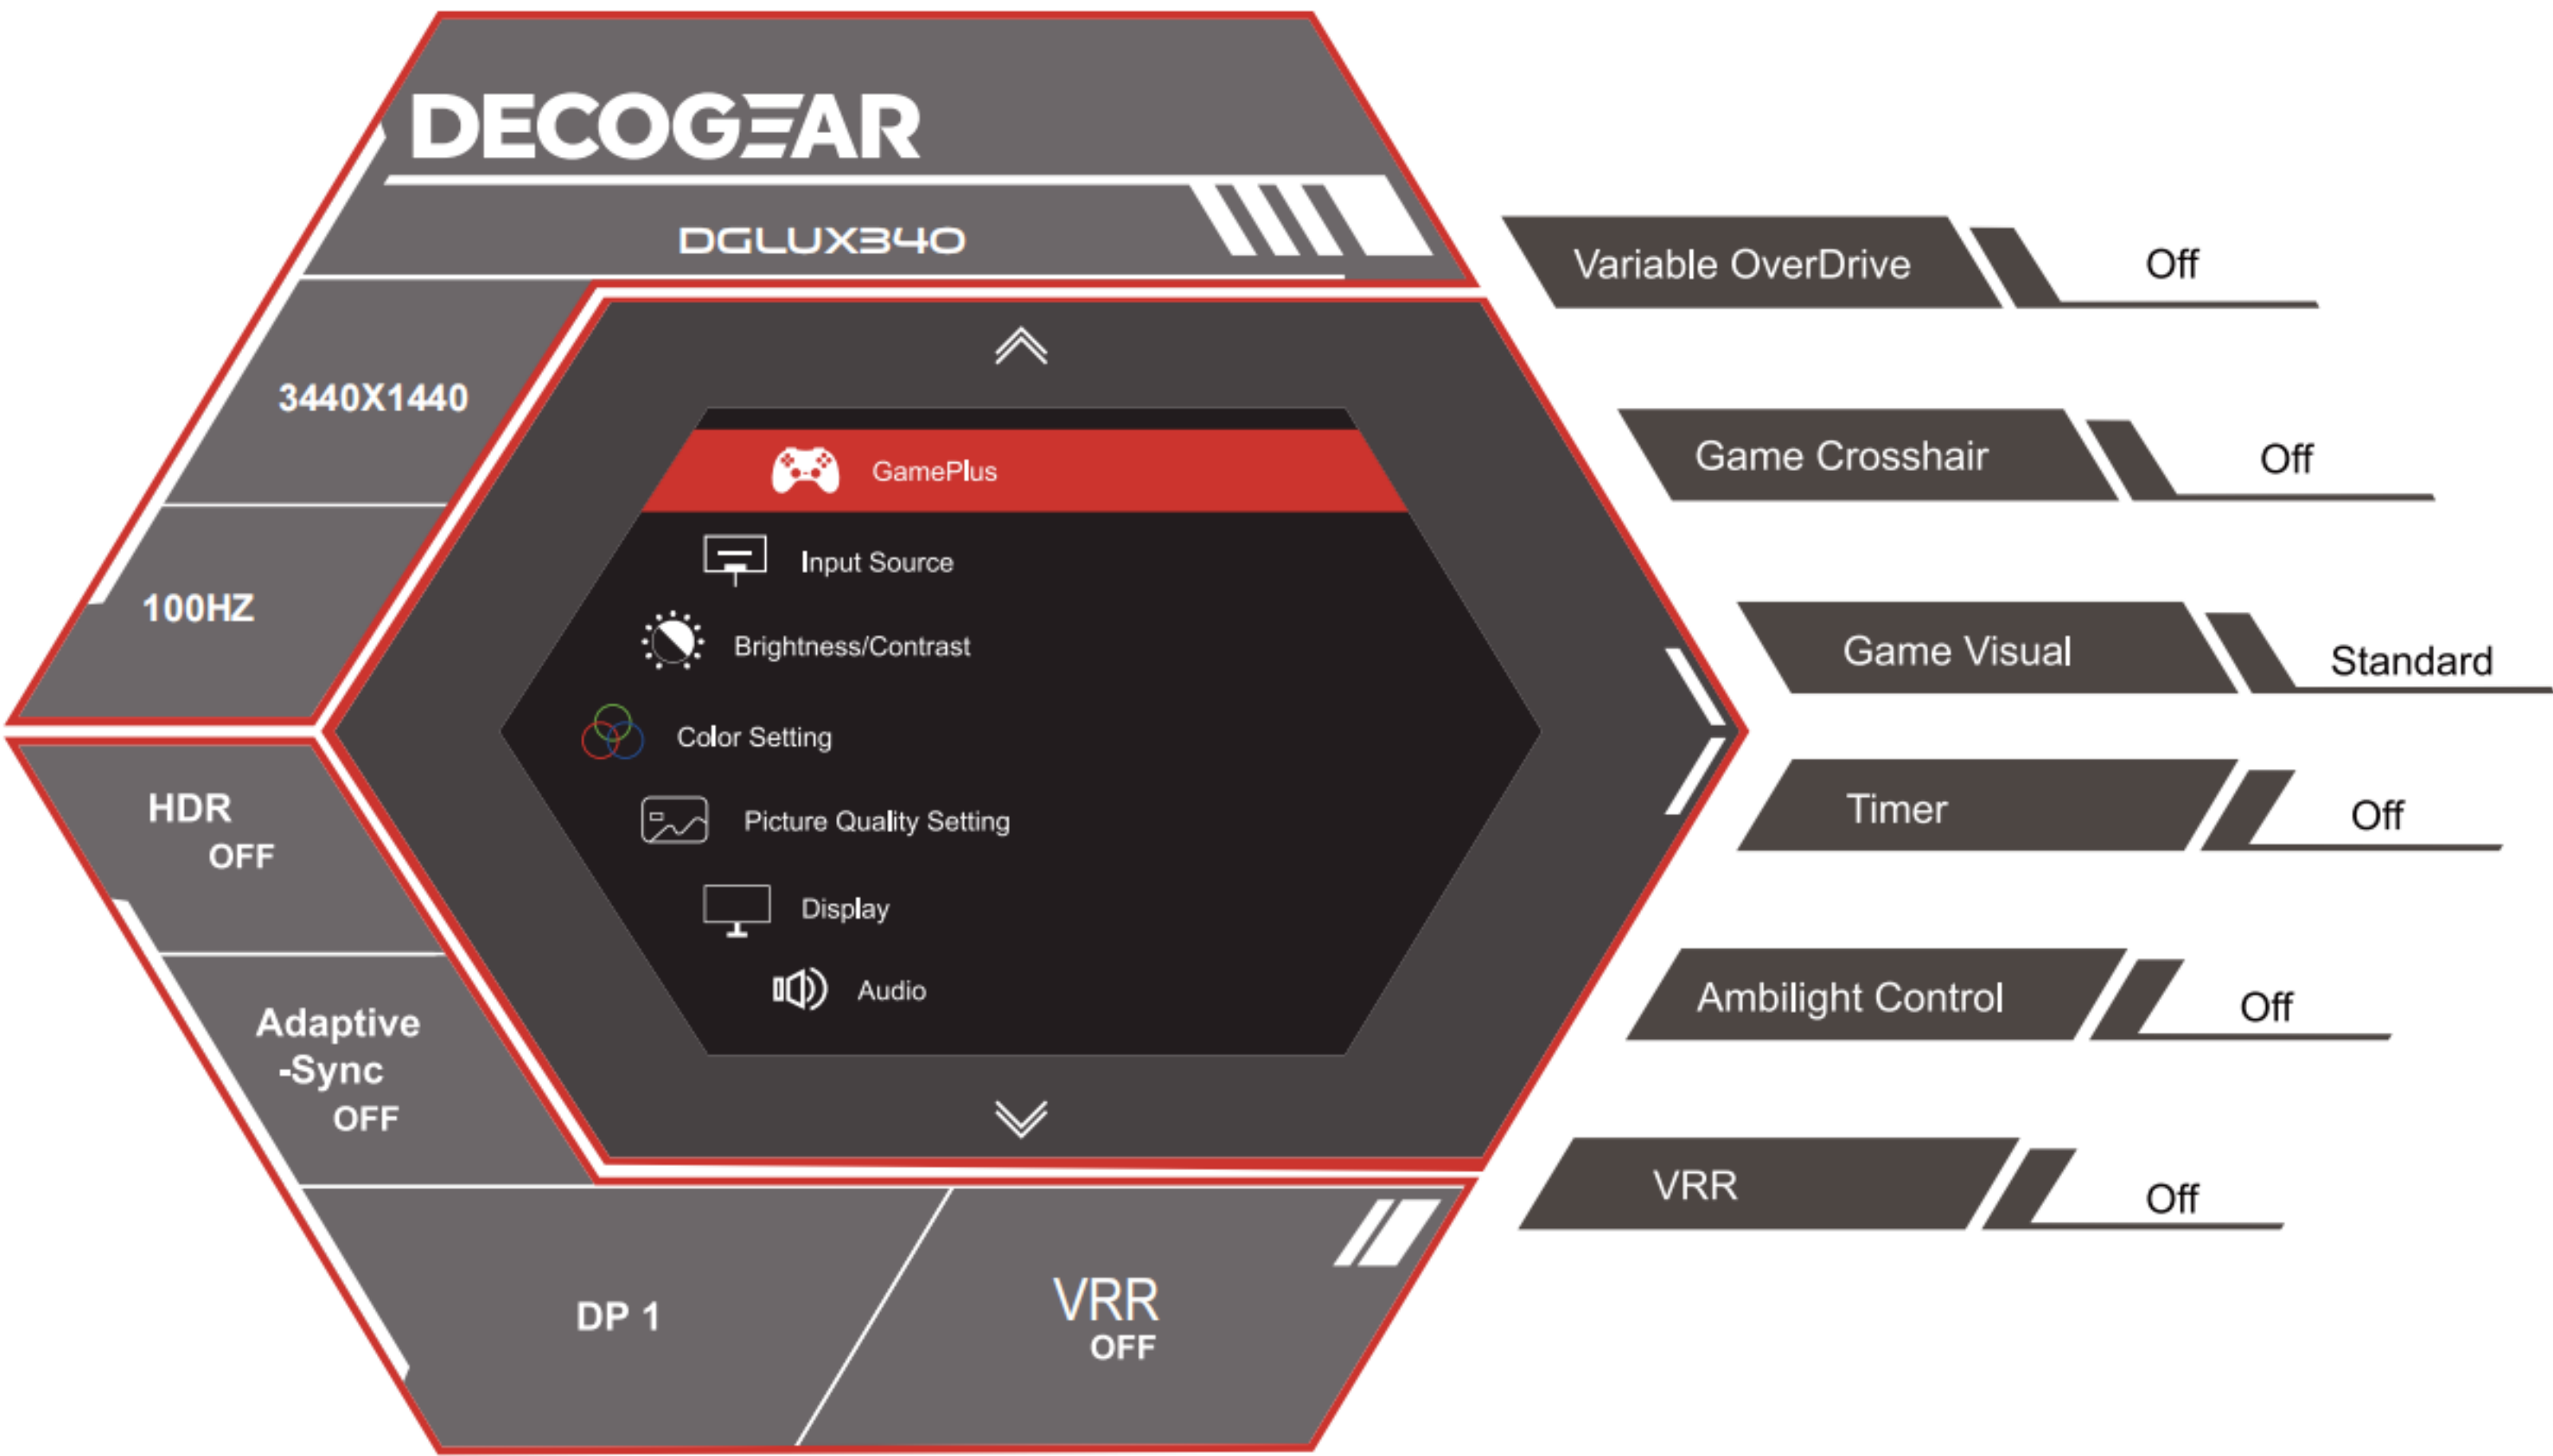

M	Menu	Activate and confirm the OSD Menu
^	Preset Mode	Select items and adjust parameters upwards in the menu.
∨	Signal Switch	Select items and adjust parameters downwards in the menu.
A	Back/Exit	When in the menu, go back or log out / Game Plus Crosshair.
⏻	Power Button	Press once to switch on the power, press and hold for 3 seconds to switch off the power.

Product Name		34inches Gaming monitor
Product model		DGLUX340
Screen Size		34inches (86.36cm)
Aspect Ratio		21:9
Viewing Angle		178°(H) / 178°(V)
Display Area (H*V)		797.22(H)*333.72(V) mm
Contrast ratio		4000:1 (TYP)
Colors		10.7M
Resolution		3440×1440
Maximum refresh rate		100Hz
Power specifications		DC 24V \equiv 2.5A The standard voltage and current may vary with countries, please refer to the label at the back of the product.
Product Dimentions	Without base	811.8x116.4x365.5mm
	Normal base	With base 811.8x196.9x472.3mm
VESAWall-Mount		75x75mm
Tilting angle		Forward titling: 5° \pm 2°; Backward tilting: 15° \pm 2°
Height range		NA
Rotation angle		NA
Vertical angle		NA
Environmental conditions	Action	Temperature: 0°C~ 40°C (32°F ~ 104°F) Humidity: 10%~90% RH (non-condensing)
	Storage	Temperature: -20° ~ 60° (-4°F ~ 140°F) Humidity: 5%~95% RH (non-condensing)



Manufacturer's 1-Year Limited Warranty

The manufacturer warrants that all parts and components are defect free in materials and workmanship for 1 year. This warranty is valid only in accordance with the conditions set forth below:

1. The warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated.
2. This limited warranty is the only written or express warranty given by the manufacturer. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.
3. This warranty gives you specific legal rights. You may also have other rights which vary by state

Procedure for Replacement or Return within the 1 Year:

To return the product for replacement or refund within the 1 year, the original purchaser must pack the product securely and send it postage paid with a description of the reason for replacement or refund, proof of purchase, and include your order number on the package, to the following address:

Deco Gear
80 Carter Drive
Edison, NJ 08817

Other contact info

Phone: 844-413-2646

Customer Service Email: customerservice@decogear.com

深圳市微领客科技有限公司			
料号：	210-MX341S-002001		
名称：	说明书		
版本：	V1	日期：	20241219
<div>技术要求：</div> <div>1、100g书写纸</div> <div>2、尺寸：140x210mm；</div> <div>3、彩色印刷，骑马钉；</div> <div>4、不得有缺页，漏印，字迹模糊；</div> <div>4、符合RoHS标准。</div>			