

49" CURVED ULTRAWIDE MONITOR



DGLUMIERE49




- Keep the monitor away from water sources or damp places, such as bath rooms, kitchens, basements and swimming pools.
- Make sure the monitor is placed on a flat surface. If the monitor falls down, it may cause human iniury or device damage.
- Store and use the monitor in a cool, dry and well ventilated place, and keep it away from emission and heat sources.
- Do not cover or block the vent hole in the rear casing, and do not use the product on a bed, sofa, blanket or similar objects.
- The range of the supply voltage of the monitor is printed on the label on the rear casing. If it is impossible to
 determine the supply voltage, please consult the distributor or local power company.
- If the monitor will not be used for a long period, please cut off the power supply to avoid electric shock in rainy days and damage due to abnormal supply voltage.
- Please use a reliable earthing socket, do not overload the socket, or it may cause fire or electric shock.
- Do not put foreign matters into the monitor, or it may cause short circuits resulting fire or electric shock.
- Do not disassemble or repair this product by self to avoid electric shock. If faults occur, please contact the
 after-sales service directly.
- · Do not pull or twist the power cable forcedly.
- There is a polarizer layer (not a protective film) on the surface of the screen. Do not peel it off, or the product
 may be damaged and the warranty will be invalid.



Packing list

- Please check that the package of the monitor contains all parts. If any part is lost, please contact the distributor.
- The color and shape of parts may vary with models. Figures in this User Manual are for reference only.
- Wires supplied may vary with purchased products. Figures in this User Manual are for reference only.

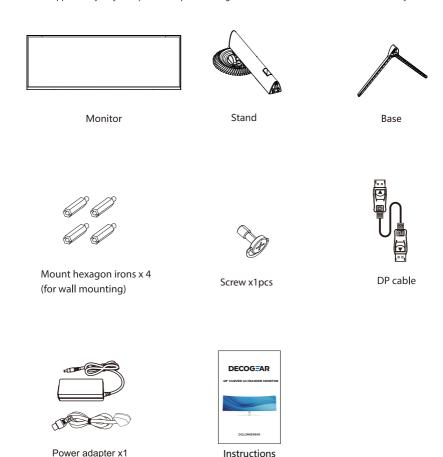


• Redundant screws can be used as spare screws.








Installation of base

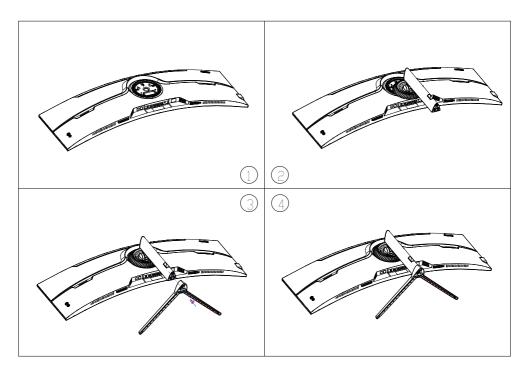

Simply hold the stand with hand to stand the monitor upright.

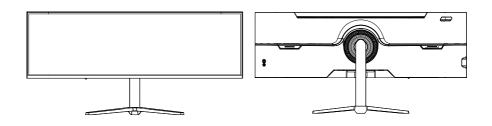


Note: During standing of the whole monitor, do not press the liquid crystal screen with hand to avoid damage to the screen.




Wall Mounting



- 1.Place a clean, dry and lint-free cloth on a flat, stable surface.
- 2.Gently lay the monitor on the cloth with the screen facing down.
- 3.Identify the four wall mounting screw holes on the back of the monitor.
- 4.Install the wall mounting bracket (not provided) on the back of the monitor and attach the monitor to the wall according to the mounting bracket's instructions.
- 5. Ensure that all screws (not provided) are tightened and secured.

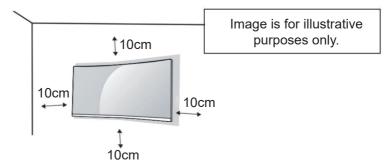


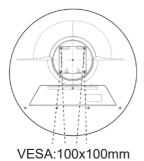


Screw 4 pcs stud (stud spec: M3, hex standoff, length ≥12mm) into vesa hole and then connect the wall mount with the 4 stud. Vesa standard is 100*100mm.


Notes:

 - Use a wall mounting bracket and screws that conform to VESA standards.
 Ensure that the box fits appropriately.
- For more information, please refer to the user manual for the wall mounting bracket.
- This monitor model does support wall mounting, however, due to its size, it is recommended to use a stand






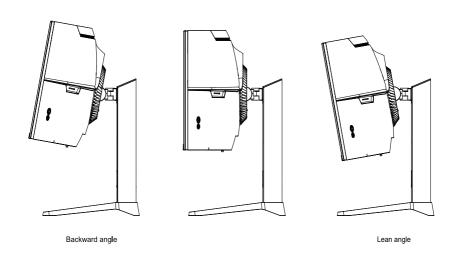

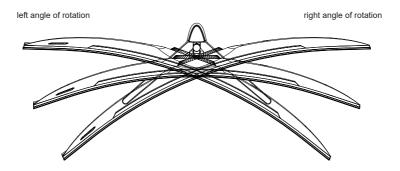



Description of buttons

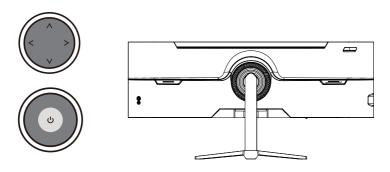


Usage of multifunctional button control key

Λ	Upwards	Adjust parameters upwards in the menu / Shortcut of Brightness adjustment
>	Menu / Confirm	Pop up the OSD Menu or confirm the setting
V	Downwards	Adjust parameters downwards in the menu / Shortcut of Game visual
<	Exit	Return or Exit the menu / Shortcut of FPS mode


O	Power off	Press to turn on the power on / off.
---	-----------	--------------------------------------




 
Cable connection:




- * The bottom interface configuration at the back of the monitor varie withproducts.
- * Note: If the power cable or signal cable is damaged, you must replace it with special soft cables or special components purchased from themanufacture or maintenance department.

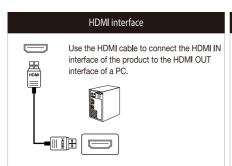

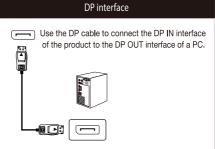

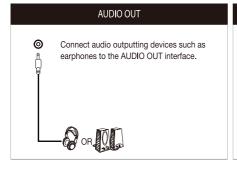

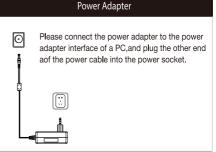






Menu description

The color and shape of the OSD menu of the actual monitor may be slightly different from what is shown in the figure. Specifications of the OSD menu may change with improvements of functions without prior notice.

The screen display (OSD) menu can be used to adjust settings of the monitor and is shown on the screen after the monitor is powered on and the M button is pressed.

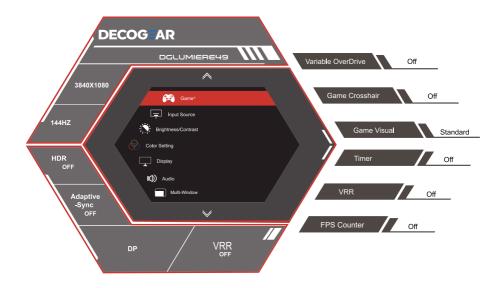

٨	Upwards	Adjust parameters upwards in the menu / Shortcut of Brightness adjustment
>	Menu / Confirm	Pop up the OSD Menu or confirm the setting
V	Downwards	Adjust parameters downwards in the menu / Shortcut of Game visual
<	Exit	Return or Exit the menu / Shortcut of FPS mode

ტ	Power off	Press to turn on the power on / off.
---	-----------	--------------------------------------

Basic parameters



	49 inch LCD Monitor
I	DGLUMIERE49
	49 inch(124.46cm)
	32:9
	178°(H) / 178°(V)
	0.1038X0.3114mm
	3000:1(TYP)
	16.7M
	3840*1080
	144Hz
	DC 24V === 3A The standard voltage and power supply may vary with countries, please refer to the label at the back of the product.
ntions	1185.6x540.7x566.1mm
	Forward tilting: -5°±2°; Backward tilting: 15°±2°
	110mm
!	20°±3°
	1
Action	Temperature: 0°C~ 40°C (32°F ~ 104°F) Humidity: 10%~90% RH (non-condensing)
Storage	Temperature: -20° ~ 60° (-4°F ~ 140°F) Humidity: 5%~95% RH (non-condensing)
	ntions



Manufacturer's 1-Year Limited Warranty

The manufacturer warrants that all parts and components are defect free in materials and workmanship for 1 year. This warranty is valid only in accordance with the conditions set forth below:

- 1. The warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated.
- 2. This limited warranty is the only written or express warranty given by the manufacturer. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.
- 3. This warranty gives you specific legal rights. You may also have other rights which vary by state

Procedure for Replacement or Return within the 1 Year:

To return the product for replacement or refund within the 1 year, the original purchaser must pack the product securely and send it postage paid with a description of the reason for replacement or refund, proof of purchase, and include your order number on the package, to the following address:

Deco Gear 80 Carter Drive Edison, NJ 08817

Other contact info

Phone: 844-413-2646

Customer Service Email: customerservice@decogear.com