

34" CURVED ULTRAWIDE MONITOR



DGVIEW304




- Keep the monitor away from water sources or damp places, such as bath rooms, kitchens, basements and swimming pools.
- Make sure the monitor is placed on a flat surface. If the monitor falls down, it may cause human iniury or device damage.
- · Store and use the monitor in a cool, dry and well ventilated place, and keep it away from emission and heat sources.
- Do not cover or block the vent hole in the rear casing, and do not use the product on a bed, sofa, blanket or similar objects.
- The range of the supply voltage of the monitor is printed on the label on the rear casing. If it is impossible to
 determine the supply voltage, please consult the distributor or local power company.
- If the monitor will not be used for a long period, please cut off the power supply to avoid electric shock in rainy days and damage due to abnormal supply voltage.
- Please use a reliable earthing socket, do not overload the socket, or it may cause fire or electric shock.
- Do not put foreign matters into the monitor, or it may cause short circuits resulting fire or electric shock.
- Do not disassemble or repair this product by self to avoid electric shock. If faults occur, please contact the
 after-sales service directly.
- · Do not pull or twist the power cable forcedly.
- There is a polarizer layer (not a protective film) on the surface of the screen. Do not peel it off, or the product
 may be damaged and the warranty will be invalid.



Packing list

- Please check that the package of the monitor contains all parts. If any part is lost, please contact the distributor.
- The color and shape of parts may vary with models. Figures in this User Manual are for reference only.
- Wires supplied may vary with purchased products. Figures in this User Manual are for reference only.

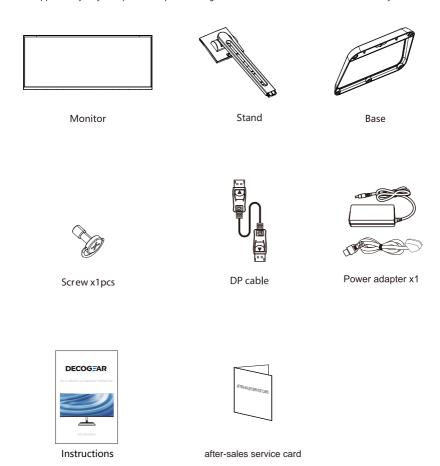


• Redundant screws can be used as spare screws.








Installation of base

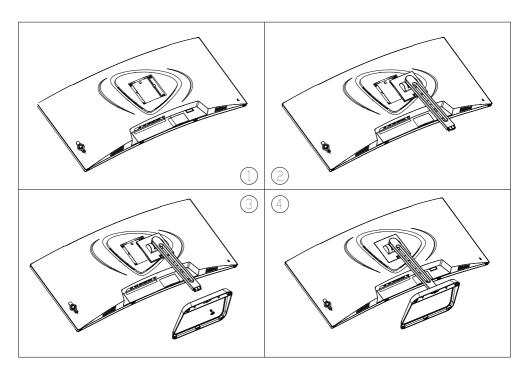

Simply hold the stand with hand to stand the monitor upright.

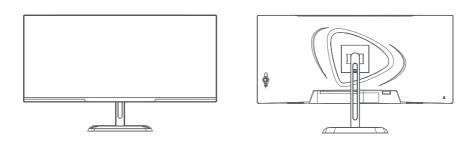


Note: When standing the monitor upright, be careful to not press the liquid crystal screen to avoid damaging it.




Wall Mounting



- 1. Place a clean, dry and lint-free cloth on a flat, stable surface.
- 2. Gently lay the monitor on the cloth with the screen facing down.
- 3. Identify the four wall mounting screw holes on the back of the monitor.
- 4. Install the wall mounting bracket (not provided) on the back of the monitor and attach the monitor to the wall according to the mounting bracket's instructions.
- 5. Ensure that all screws (not provided) are tightened and secured.

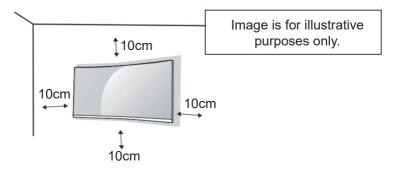


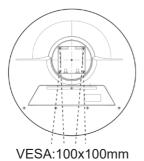

Screw 4 pcs stud (stud spec: M3, hex standoff, length ≥12mm) into vesa hole and then connect the wall mount with the 4 stud. Vesa standard is 100*100mm.

Notes:

 - Use a wall mounting bracket and screws that conform to VESA standards.
 Ensure that the box fits appropriately.
- For more information, please refer to the user manual for the wall mounting bracket.
- This monitor model does support wall mounting, however, due to its size, it is recommended to use a stand












Backward angle

Lean angle

Instructions for use



Description of buttons

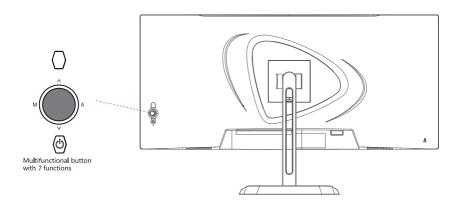


Usage of multifunctional button control key


\cap	Shortcut Buttons	Reticle function	
М	Menu	Activate and confirm the OSD Menu	
^	FPS button	Adjust the parameters upwards in the menu / FPS (Shortcut buttons)	
\	Signal Switch	Adjust the parameters down in the menu / Signal switching (Shortcut buttons)	
Α	Brightness button	When in the menu, go back or log out / Brightness (Shortcut buttons)	
•	Confirm Button	Menu/Confirm button	
৩	Power Button	Shutdown	





Cable connection:

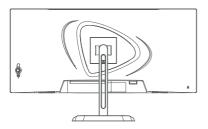


- * The bottom interface configuration at the back of the monitor varies with products.
- * Note: If the power cable or signal cable is damaged, you must replace it with special soft cables or special components purchased from the manufacture or maintenance department.

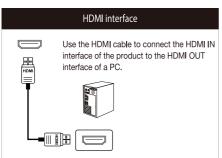

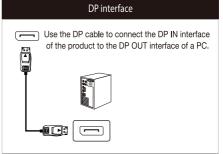

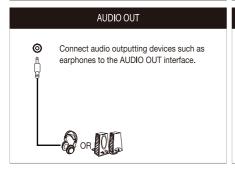

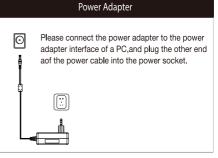






Menu description

The color and shape of the OSD menu of the actual monitor may be slightly different from what is shown in the figure. Specifications of the OSD menu may change with improvements of functions without prior notice.

The screen display (OSD) menu can be used to adjust settings of the monitor and is shown on the screen after the monitor is powered on and the M button is pressed.

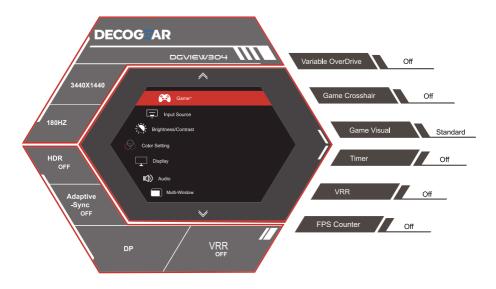

\Box	Shortcut Buttons	Reticle function		
М	Menu	Activate and confirm the OSD Menu		
\land	FPS button	Adjust the parameters upwards in the menu / FPS (Shortcut buttons)		
V	Signal Switch	Adjust the parameters down in the menu / Signal switching (Shortcut buttons)		
Α	Brightness button	When in the menu, go back or log out / Brightness (Shortcut buttons)		
•	Confirm Button	Menu/Confirm button		
Ó	Power Button	Shutdown		

Basic parameters



Product Name		34 inch LCD Monitor			
Product mode		DGVIEW304			
Screen Size		34 inch(86.36cm)			
50.005.20		, ,			
Aspect Ratio		21:9			
Viewing Angle	!	178°(H) / 178°(V)			
Pixel pitch		0.23175(H) ×0.23175(V)mm			
Contrast ratio		3000:1(TYP)			
Color		16.7M			
Resolution		3440*1440			
Refresh Rate		HDMI: 100 Hz / DP: 180 Hz			
Power Input		DC 24V 2.5A The standard voltage and power supply may vary with countries, please refer to the label at the back of the product.			
Product Dime (With base)	ntions	811.75x213.05x489.14mm			
Tilting angle		Forward tilting: -5°±3°; Backward tilting: 15°±3°			
Height range		N/A			
Rotation angle		N/A			
Vertical angle		N/A			
Environmental	Action	Temperature: 0°C~ 40°C (32°F ~ 104°F) Humidity: 10%~90% RH (non-condensing)			
conditions	Storage	Temperature: -20° ~ 60° (-4°F ~ 140°F) Humidity: 5%~95% RH (non-condensing)			



Manufacturer's 1-Year Limited Warranty

The manufacturer warrants that all parts and components are defect free in materials and workmanship for 1 year. This warranty is valid only in accordance with the conditions set forth below:

- 1. The warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated.
- 2. This limited warranty is the only written or express warranty given by the manufacturer. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.
- 3. This warranty gives you specific legal rights. You may also have other rights which vary by state

Procedure for Replacement or Return within the 1 Year:

To return the product for replacement or refund within the 1 year, the original purchaser must pack the product securely and send it postage paid with a description of the reason for replacement or refund, proof of purchase, and include your order number on the package, to the following address:

Deco Gear 80 Carter Drive Edison, NJ 08817

Other contact info

Phone: 844-413-2646

Customer Service Email: customerservice@decogear.com