

DECOGEAR®

27" CURVED GAMING MONITOR




DGJET27

- Keep the monitor away from water sources or damp places, such as bath rooms, kitchens, basements and swimming pools.
- Make sure the monitor is placed on a flat surface. If the monitor falls down, it may cause human injury or device damage.
- Store and use the monitor in a cool, dry and well ventilated place, and keep it away from emission and heat sources.
- Do not cover or block the vent hole in the rear casing, and do not use the product on a bed, sofa, blanket or similar objects.
- The range of the supply voltage of the monitor is printed on the label on the rear casing. If it is impossible to determine the supply voltage, please consult the distributor or local power company.
- If the monitor will not be used for a long period, please cut off the power supply to avoid electric shock in rainy days and damage due to abnormal supply voltage.
- Please use a reliable earthing socket, do not overload the socket, or it may cause fire or electric shock.
- Do not put foreign matters into the monitor, or it may cause short circuits resulting fire or electric shock.
- Do not disassemble or repair this product by self to avoid electric shock. If faults occur, please contact the after-sales service directly.
- Do not pull or twist the power cable forcibly.
- There is a polarizer layer (not a protective film) on the surface of the screen. Do not peel it off, or the product may be damaged and the warranty will be invalid.

Packing list

 
- Please check that the package of the monitor contains all parts. If any part is lost, please contact the distributor.
- The color and shape of parts may vary with models. Figures in this User Manual are for reference only.
- Wires supplied may vary with purchased products. Figures in this User Manual are for reference only.

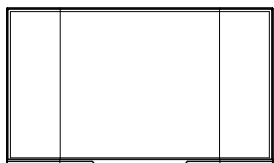

Monitor



 Stand

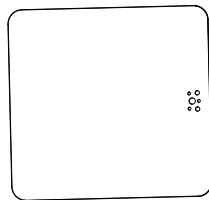


Base



Screw x1pcs



 
DP cable



Power adapter x1



 after-sales service card




Wall-mounted screws*4





Instructions

- Redundant screws can be used as spare screws.

 Installation of base

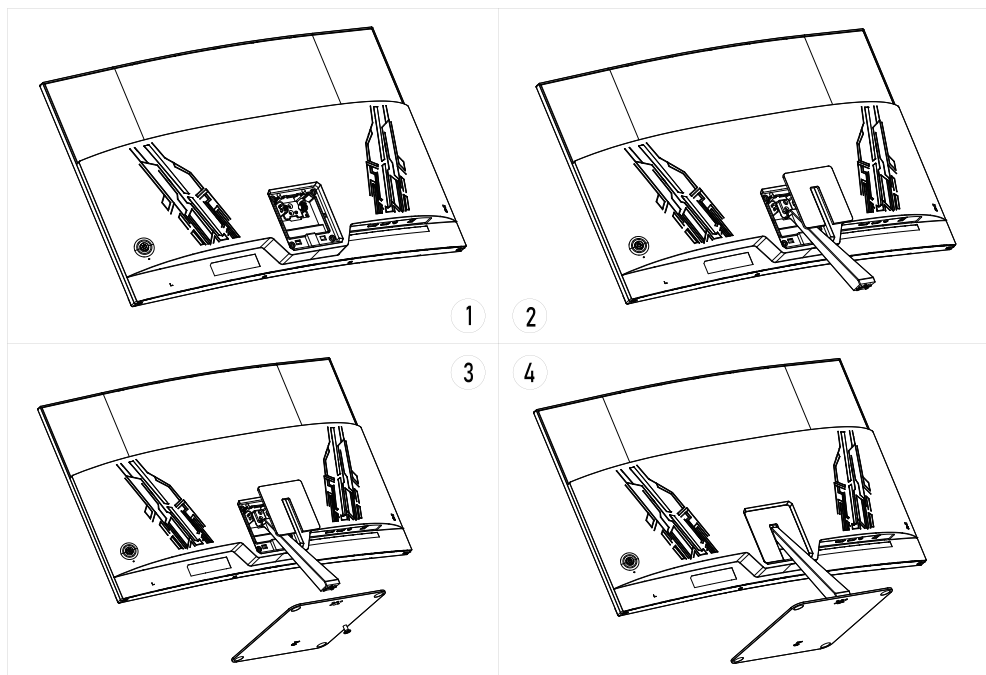


  Simply hold the stand with hand to stand the monitor upright.

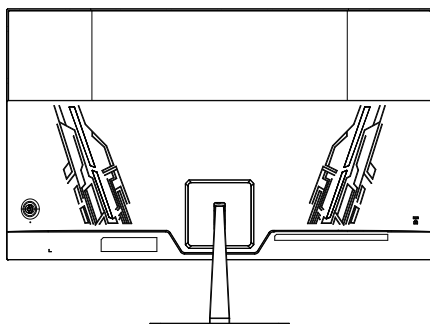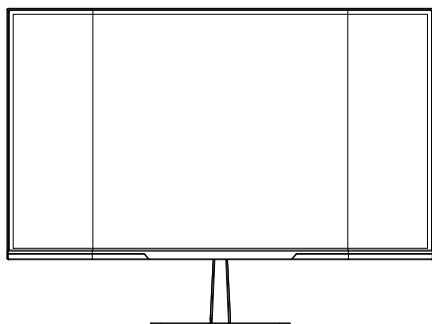


⚠ Note: During standing of the whole monitor, do not press the liquid crystal screen with hand to avoid damage to the screen.

 - 1.Place a clean, dry and lint-free cloth on a flat, stable surface.
- 2.Gently lay the monitor on the cloth with the screen facing down.
- 3.Identify the four wall mounting screw holes on the back of the monitor.
- 4.Install the wall mounting bracket (not provided) on the back of the monitor and attach the monitor to the wall according to the mounting bracket's instructions.
- 5.Ensure that all screws (not provided) are tightened and secured.

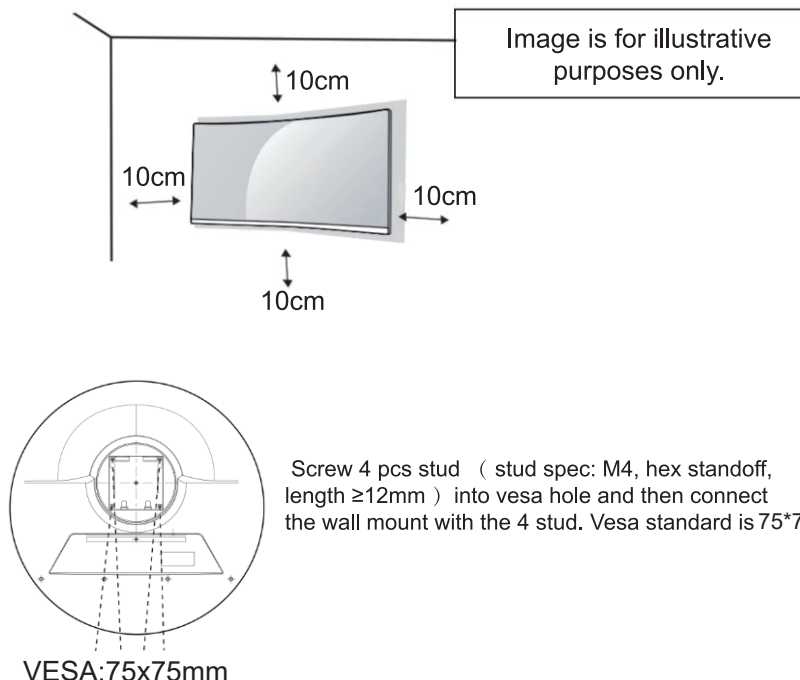


Notes:

 - Use a wall mounting bracket and screws that conform to VESA standards. Ensure that the box fits appropriately.
- For more information, please refer to the user manual for the wall mounting bracket.
- This monitor model does support wall mounting, however, due to its size, it is recommended to use a stand.

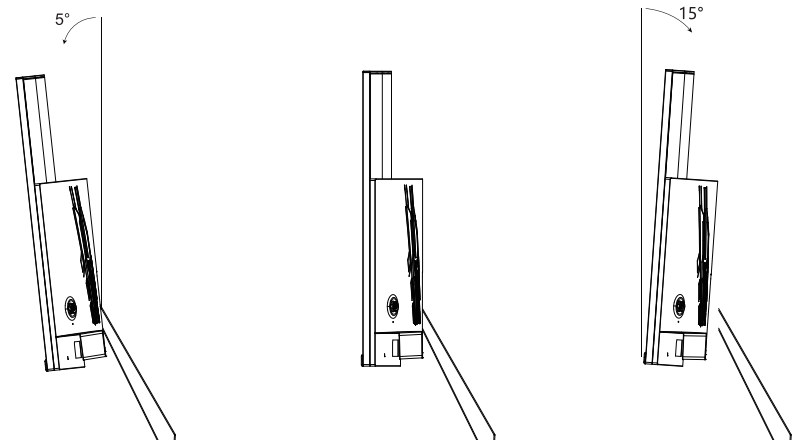

Tilting angle
-5° - +15°

 
Cable connection:

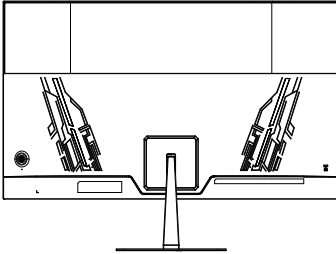


* The bottom interface configuration at the back of the monitor varies with products.

* Note: If the power cable or signal cable is damaged, you must replace it with special soft cables or special components purchased from the manufacturer or maintenance department.

 
HDMI interface

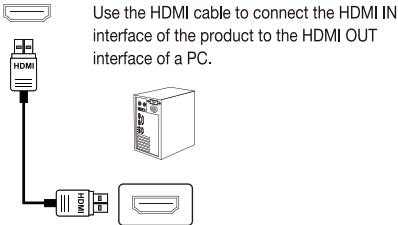


DP interface

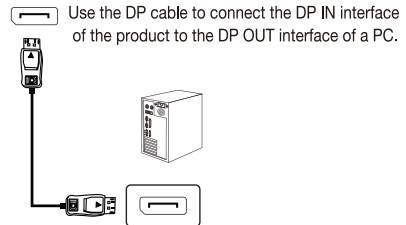 



AUDIO OUT

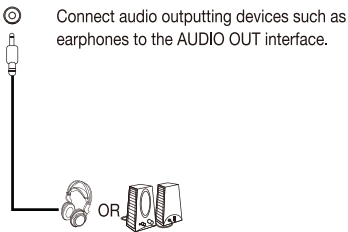 

Power Adapter

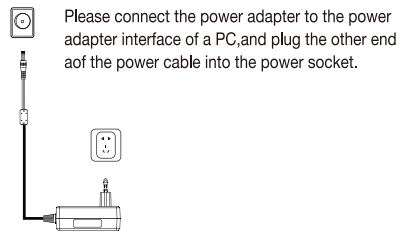 


Description of buttons

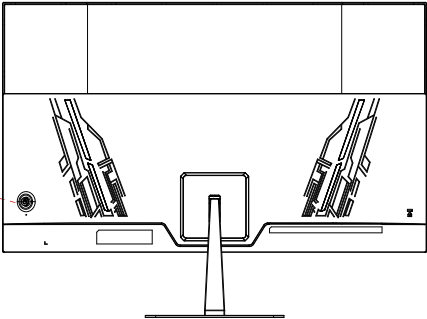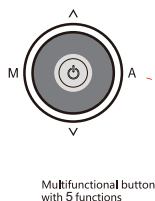  

Usage of multifunctional button control key

▲	Plus key	Move the selection upwards / Increase the value (Also as FPS mode hotkey)
▼	Reduce key	Move the selection downwards / Reduce the value(Also as adjust signal key)
↶	Exit key	Return to the previpus level menu or exit the OSD menu(Also as Game Crosshair hotkey)
M	Menu	Pop up the menu, or confirm the selection
⏻	Power Button	Press the pop-up menu lightly and hold it for 2 seconds to turn off the display

 Menu description

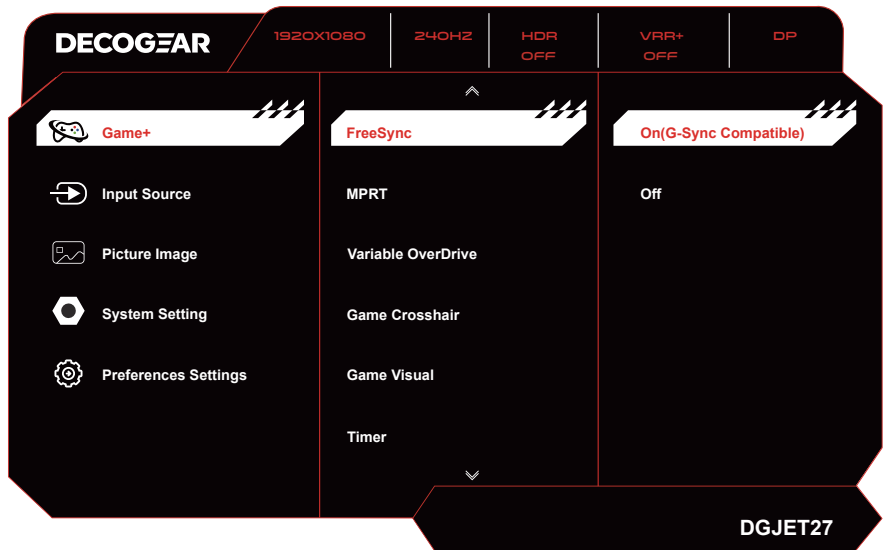

Game+	FreeSync	On(G-Sync Compatible)/Off
	MPRT	On/Off
	Variable OverDrive	Off/High/Medium/Low
	Game Crosshair	Off/Mode 1/Mode 2/Mode 3
	Game Visual	Standard/Movie/RTS/RPG/FPS/MOBA/sRGB/Reader
	Timer	Off/30/50/60/90
	Game Light	Color Mode: Stable/Marquee/off
		Color Type: RED/Green/Blue/Yellow/Purple/Cyan/White/Colorful
	VRR	On/Off
	FPS Counter	On/Off
Input Source	Shadow boost	0-100
	DP/ HDMI	
Picture Image	Brightness	0-100
	Contrast	0-100
	HDR	On/Off
	DCR	On/Off
	Gamma	1.8/2.0/2.2/2.4/2.6
	Color Temperature	Normal/Warm/Cool/User
	Sharp pixel	0-100
	Low Blue Light	0-100
	Hue	0-100
System Setting	Saturation	0-100
	Language	8 country
	Audio	Volume/Mute
	Menu settings	OSD Transparency/OSD Time Out/OSD H-Position/OSD V-Position/OSD Rotation
	Aspect Ratio	wide screen/4:3
	Monitor Info	Model/Color depth/Color mode/RGB/Game Visual/FW
	Reset	
Preferences settings	ECO Mode	On/Off
	Power Indicator	On/Off
	Shortcut setting	UP Key(FPS Counter)/DownKey(Input)/Exit Key(Game Crosshair) List: Brightness/Contrast/Game Crosshair/Game Visual/FPS Counter/Volume/Input

Product Name	27inches Gaming Monitor	
Product model	DGJET27	
Screen Size	27 inches(68.58cm)	
Aspect Ratio	16:9	
Viewing Angle	178°(H) / 178°(V)	
Panel Type	IPS	
Contrast ratio	1000:1	
Color	16.7M	
Resolution	1920x1080	
Refresh Rate	240Hz	
Power Input	DC 12V $\overline{=}$ 4A The standard voltage and power supply may vary with countries, please refer to the label at the back of the product.	
Product Dimentions (With base)	661.8X200X454.5	
Tilting angle	Forward tilting: $-5^{\circ}\pm 2^{\circ}$; Backward tilting: $15^{\circ}\pm 2^{\circ}$	
Height range	N/A	
Rotation angle	N/A	
Vertical angle	/	
Environmental conditions	Action	Temperature: 0°C ~ 40°C (32°F ~ 104°F) Humidity: 10%~90% RH (non-condensing)
	Storage	Temperature: -20°C ~ 60°C (-4°F ~ 140°F) Humidity: 5%~95% RH (non-condensing)



Manufacturer's 1-Year Limited Warranty

The manufacturer warrants that all parts and components are defect free in materials and workmanship for 1 year. This warranty is valid only in accordance with the conditions set forth below:

1. The warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated.
2. This limited warranty is the only written or express warranty given by the manufacturer. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.
3. This warranty gives you specific legal rights. You may also have other rights which vary by state

Procedure for Replacement or Return within the 1 Year:

To return the product for replacement or refund within the 1 year, the original purchaser must pack the product securely and send it postage paid with a description of the reason for replacement or refund, proof of purchase, and include your order number on the package, to the following address:

Deco Gear
80 Carter Drive
Edison, NJ 08817

Other contact info

Phone: 844-413-2646

Customer Service Email: customerservice@decogear.com

DECOGEAR®

东莞万联显示科技有限公司

料号：	210-27Y22H-002001		
名称：	说明书		
版本：	V1	日期：	20250818

技术要求：

- 1、100g书写纸
- 2、尺寸：140x210mm；
- 3、彩色印刷，骑马钉；
- 4、不得有缺页，漏印，字迹模糊；
- 4、符合RoHS标准。