

27" OLED Curved Ultrawide Monitor





World-class monitors, customer-first approach.

About Deco Gear

We believe that cutting-edge technology should be accessible to everyone. We're dedicated to designing and delivering high-quality monitors and peripherals that elevate your everyday experiences—whether you're a professional, a gamer, or simply enjoying the finer things in life.

Who We Are

Deco Gear is more than just a brand; we're a team of tech enthusiasts, creators, and innovators who are passionate about enhancing the way you interact with technology. Since our inception, our mission has been to provide top-tier products that combine performance, style, and value. We understand that in today's fast-paced world, you need gear that keeps up with your lifestyle without breaking the bank.

Our Promise

Quality and customer satisfaction are at the heart of everything we do. We're committed to delivering products that meet and exceed your expectations. Every Deco Gear product is backed by our 1-Year Manufacturer Warranty, ensuring that you can purchase with confidence. Our responsive customer service team is always ready to assist you, making sure that your experience with Deco Gear is nothing short of exceptional.

Visit **decogear.com** for more product support.








- Keep the monitor away from water sources or damp places, such as bathrooms, kitchens, basements and swimming pools.
- Make sure the monitor is placed on a flat surface. If the monitor falls down, it may cause injury or device damage.
- Store and use the monitor in a cool, dry and well ventilated place, and keep it away from emission and heat sources.
- Do not cover or block the vent hole in the rear casing, and do not use the product on a bed, sofa, blanket or similar objects.
- The range of the supply voltage of the monitor is printed on the label on the rear casing.
 If it is impossible to determine the supply voltage, please consult the distributor or local power company.
- If the monitor will not be used for a long period, please cut off the power supply to avoid electric shock in rainy days and damage due to abnormal supply voltage.
- Please use a reliable grounded socket, Do not overload the socket, or it may cause fire or electric shock.
- Do not put foreign matters into the monitor, or it may cause short circuits resulting fire or electric shock.
- Do not disassemble or repair this product by self to avoid electric shock. If faults occur, please contact the after-sales service directly.
- Do not pull or twist the power cable forcedly.
- There is a polarizer layer (not a protective film) on the surface of the screen. Do not peel
 it off, or the product may be damaged and the warranty will be invalid.



Package Content

Packing list

- Please check that the package of the monitor contains all parts. If any part is lost, please contact the distributor.
- The color and shape of parts may vary with models. Figures in this User Manual are for reference only.
- Cables supplied may vary with purchased products. Figures in this User Manual are for reference only.

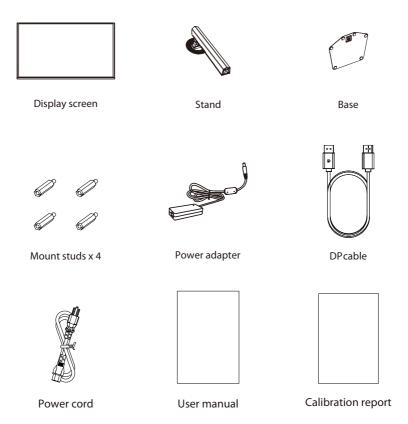




Installation

Installing the Base


1. Open the package and take out the monitor with foam still attached. Gently place it face-down on a desktop or table. Remove the foam covering the monitor.



2. Take out the stand stem and base, and secure them with thumbscrews.

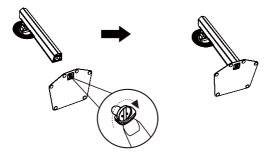


3. Align the base and stand components assembled in Step 2 to the slot of the machine and clip them. (Note: Slide the quick disassembly button up with fingers to take out the base and stand components)

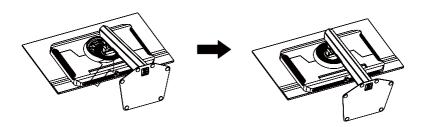




4. Grasp the bracket with your hands to place the monitor upright (Note: In the process of placing the monitor, please do not directly grab the screen with your hands to prevent the screen from breaking).

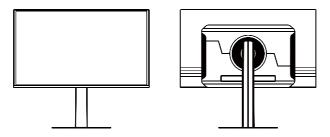

Note: When placing the monitor, do not press the liquid crystal screen with hand to avoid damage to the screen.


Mount Installation

1. Open the package and take out the monitor with foam still attached. Gently place it face-down on a desktop or table.

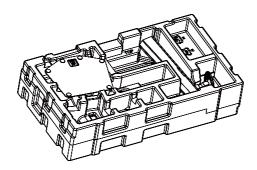





2. Remove the upper foam without the monitor leaving the lower foam. Lock the four mount studs into the screw holes of the rear shell.

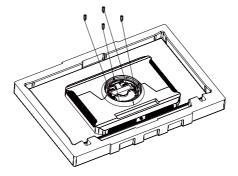

3. When mounting the product, avoid pressing directly on the screen to prevent damage.

 Tip: The mount size for this monitor is 75x75mm.



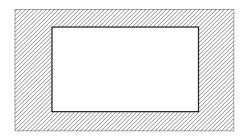


↑ Note: In order to prevent the monitor from falling when it is used on a wall, please install it properly and use safety protection. Do not place or hang any objects on the wall bracket, and the wall height should be within 2 meters.






 Adjustment of monitor




Rotation angle (±25°mm)

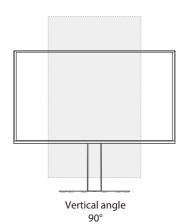



Tilting angle (-5°- +20°)

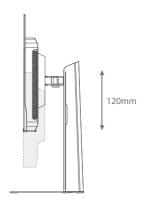


Height adjustment (0- 120mm)




Instructions for use

Button Description

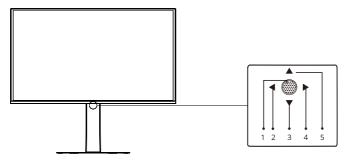

Button	Function
1	Center button: Confirm key or access the main menu.
2	Left button: Exit or return to the previous menu.
3	Down button: Move down in the menu or select turn off the monitor.
4	Right button: Quickly adjust the Picture Mode.
5	Up button: Move up in the menu or quickly adjust the Brightness.

Indicator Light

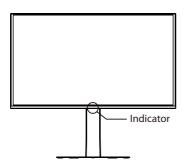


Indicator light: A steady blue light indicates that the power is on and the monitor is operating normally.


A flashing blue light indicates that there is no video source or signal, or that low voltage is detected. Make sure your computer It is turned on and all video cables are fully plugged in and/or connected.




 Cable connections:




- $\mbox{\ensuremath{^{\star}}}$ The bottom interface configuration at the back of the monitor varie with products.
- * Note: If the power cable or signal cable is damaged, you must replace it with special soft cables or special components purchased from the manufacture or maintenance department.

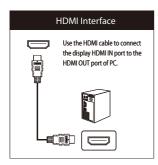

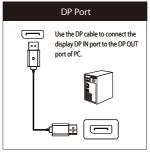



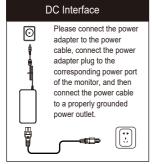





Menu description


- The color and contents of the OSD menu of the actual monitor may be slightly different from them shown in the figure.
- Specifications of the OSD menu may change with improvements of functions without prior notice.

Press the menu button on the control panel to access the monitor menu. The detailed information of each menu can be found in the following sections.

1. Press one of the buttons to activate the Navigation window.



2. Press to enter the OSD screen.

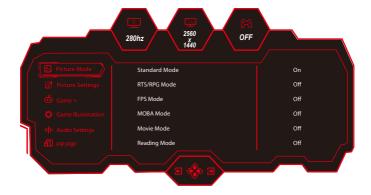

- 3. Rocker ▼ or ▲ to browse functions.
- Select the desired function, and rocker at to enter the sub-menu.
- Rocker ▼ or ▲ to scroll through sub-menus, and rocker ♠ to select and confirm the desired function.
- Rocker ▼ or ▲ to select one option, and rocker 🏫 to confirm settings and exit from the current menu.



• Monitor functions may vary by model. The functions described in this manual are for reference only; actual functions may differ.

Main Menu	Sub Menu	Option	
	Standard Mode	Off/On	
	RTS/RPG Mode	Off/On	
	FPS Mode	Off/On	
	MOBA Mode	Off/On	
	Movie Mode	Off/On	
	Reading Mode	Off/On	
Picture Mode	Night Mode	Off/On	
. ictare mode	Eye Care Mode	Off/On	
	Mac View Mode	Off/On	
	E-Book Mode	Off/On	
	sRGB Mode	Off/On	
	AdobeRGB Mode	Off/On	
	DCI-P3 Mode	Off/On	
	Brightness	0-100	
	Brightness Mode	Normal/Highlight	
	Contrast	0-100	
	Low Blue Light	0-100	
	Sharpness	0-5	
	Gamma	1.8/2.0/2.2/2.4/2.6/S.curve	
	Aspect Ratio	Wide Screen/4:3/1:1/21:9/Auto	
Picture Settings	Color Temperature	Warm/Natural/Cool/User1/User2/User3	
	Hue	0-100(R/G/B/C/M/Y)	
	Saturation	0-100(R/G/B/C/M/Y)	
	Eyeshield Remind	Off/30 Minutes/1Hour/1.5Hour/2Hour/2.5Hour/3Hour/ 3.5Hour/4Hour	
	Reset Picture Settings	Off/On	
	All Game Mode	Wide Screen/25"/sPX Mode/1920x1080/Window Position	
	HDR	Off/Auto/HDR Game/HDR Movie	
	Adaptive-Sync	Off/On	
Game +	Picture Enhancement	Color Enhancement/CR Enhancement/Shadow Balance/ Night Vision Mode/Super Resolution/Game Rush Mode/ Reset Picture Enhancement	
	Game Aid	Refresh Rate/Game Crosshair/Crosshair Color/Stop Watch/ Game Time/Magnifier Mode/Hawk-eye Vision/Alignment Aid/ Reset Game Aid	
	Light Strip	Mode/Color/Speed	
Game	Ring Light	Mode/Color/Speed	
Illumination	Picture Rhythm	Off/Global Rhythm/2 Zone Rhythm	



Main Menu	Sub Menu	Option		
	Boot On-Off	Boot On/Boot Off		
Game	Brightness	Off/Low/Middle/High		
Illumination	Reset Game Illumination	Off/On		
	Volume	0-100		
Audio Settings	Audio Mute	Off/On		
	Reset Audio Settings	Off/On		
	PIP/PBP Mode	Off/PIP Mode/PBP 2Win 1:1		
	Sub-Signal Source	DP/HDMI1/HDMI2		
	Audio Source	Auto/DP/HDMI1/HDMI2		
PIP/PBP	PIP Position	Top Right/Top Left/Bottom Right/Bottom Left		
	PIP Size	Small/Medium/Large		
	Window Swap	Off/On		
	Reset PIP/PBP	Off/On		
	Input Signal	Auto/DP/HDMI1/HDMI2		
	Quick Boot	Off/On		
I/O Settings	DSC	Off/On		
	DDC/CI	Off/On		
	Quantization Range	RGB Limit(16~235)/RGB Full(0~255)/Auto		
	Reset I/O Settings	Off/On		
	Language	简体中文/English/한국어 (ペ・ジ / Portugues do Brasilazil/ Deutsch/Nederland/Suomi/Français/Еλληνικά/Indonesia/ Italiano/日本語/Malaysia/Polskie/Português/Русский/ Español/ไทย/Українська/Тіếng Việt/繁體中文/Türkçe		
	OSD Time Out	5-60		
	OSD H-Position	0-100		
	OSD V-Position	0-100		
System Settings	OSD Transparency	0-5		
)	Hotkey1 Setting	Brightness/Contrast/Volume/Audio Mute/Shadow Balance/		
	Hotkey2 Setting	GameCrosshair/Magnifier Mode/Hawk-eye Vision/Refresh		
	Hotkey3 Setting	Rate/Game Time/Color Enhancement/Night Vision Mode/ Super Resolution/Adaptive-Sync/Picture Mode/HDR/Input		
	Hotkey4 Setting	Signal/Game Illumination/PIP/PBP/All Game Mode		
	Navigation Guidance	Off/On		
	OSD Lock	Off/On		
	Energy Saving	Power LED/Power Saving/No Signal Timer		
	Information	Input Source/Resolution/Picture Mode/HDR State:		
	Restore Factory Settings	Yes/No		



Main Menu	Sub Menu	Option
	Pixel Shift	Slow/Medium/Fast
	Screen Saver	Strength/Detection Rate
	Static Icon Detection	Strength
	Low Power Consumption	Off/On
OLED Care Taskbar Detection Off/Weak/Medium/Strong		Off/Weak/Medium/Strong
	Boundary Detection	Off/Weak/Medium/Strong
	Panel Maintenance	Off/On
	Protection Notice	Off/On
	Oled Care Mode	Custom/Strong
	Reset OLED Care	Off/On



Specification

Product name		Deco Gear OLED Monitor		
Product model		DGOLED27		
Screen size		26.5 inch		
Aspect ratio)	16:9		
Viewing an	gle	178°(H) / 178°(V)		
Contrast ra	tio	1500000 :1(TYP)		
Color		1.07B		
Resolution		2560 x 1440		
Refresh rate	2	280Hz		
Power input		24V ⋅⋅⋅ 5.0A The standard voltage and power supply may vary with countries, please refer to the label at the back of the product.		
Product	Without stand	610.7 x 351.7 x 65mm		
dimensions	With stand	610.7 x 535.5x 221mm		
Vertical angle		90°		
Tilting angle		Forward tilting-5°; Backward tilting20°		
Height range		120mm		
Rotation angle		±25°		
Environmental	Action	Temperature: 0°C~ 40°C (32°F ~ 104°F) Humidity: 10%~90% RH (non-condensing)		
conditions	Storage	Temperature: -20°~ 60° (-4°F ~ 140°F) Humidity: 5%~95% RH (non-condensing)		



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)This device may not cause harmful interference, (2)This device must accept any interference received,including interference that may cause undesired operation.



Supported resolution and refrech rate

HDMI1	
Detailed Timing	
2560x1440@60Hz	
2560x1440@120Hz	
2560x1440@144Hz	
2560x1440@280Hz	
Entablished Timing	
720x400@70Hz-IBM.VGA	
640x480@60Hz-IBM.VGA	
640x480@67Hz-Apple.MacII	
640x480@72Hz-VESA	
640x480@75Hz-VESA	
800x600@56Hz-VESA	
800x600@60Hz-VESA	
800x600@72Hz-VESA	
800x600@75Hz-VESA	
832x624@75Hz-Apple.MacII	
1024x768@60Hz-VESA	
1024x768@70Hz-VESA	
1024x768@75Hz-VESA	
1280x1024@75Hz-VESA	
Standard Timing	
1920x1080@60Hz-VESASTD	
1680x1050@60Hz-VESASTD	
1280x1024@60Hz-VESASTD	
1152x864@75Hz-VESASTD	
1280x720@60Hz-VESASTD	
1280x960@60Hz-VESASTD	
1440x900@60Hz-VESASTD	
Video Timing	
[1]640x480p@59.94Hz@4:3@1:1	
[2]720x480p@59.94Hz/60Hz@4:3@8:9	Ξ
[3]720x480p@59.94Hz/60Hz@16:9@32:27	
[4]1280x720p@59.94Hz/60Hz@16:9@1:1	
[16]1920x1080p@59.94Hz/60Hz@16:9@1:1[Native	=1]
[17]720x576p@50Hz@4:3@16:15	
[18]720x576p@50Hz@16:9@64:45	
[19]1280x720p@50Hz@16:9@1:1	
[31]1920x1080p@50Hz@16:9@1:1	
[32]1920x1080p@23.98Hz24Hz@16:9@1:1	

Detailed Timing
2560x1440@60Hz
2560x1440@120Hz
2560x1440@144Hz
2560x1440@280Hz
Entablished Timing
720x400@70Hz-IBM.VGA
640x480@60Hz-IBM.VGA
640x480@67Hz-Apple.MacII
640x480@72Hz-VESA
640x480@75Hz-VESA
800x600@56Hz-VESA
800x600@60Hz-VESA
800x600@72Hz-VESA
800x600@75Hz-VESA
832x624@75Hz-Apple.MacII
1024x768@60Hz-VESA
1024x768@70Hz-VESA
1024x768@75Hz-VESA
1280x1024@75Hz-VESA
Standard Timing
1920x1080@60Hz-VESASTD
1680x1050@60Hz-VESASTD
1280x1024@60Hz-VESASTD
1152x864@75Hz-VESASTD
1280x720@60Hz-VESASTD
1280x960@60Hz-VESASTD
1440x900@60Hz-VESASTD
Video Timing
[1]640x480p@59.94Hz@4:3@1:1
[2]720x480p@59.94Hz/60Hz@4:3@8:9
[3]720x480p@59.94Hz/60Hz@16:9@32:27
[4]1280x720p@59.94Hz/60Hz@16:9@1:1
[16]1920x1080p@59.94Hz/60Hz@16:9@1:1[Native=1]
[17]720x576p@50Hz@4:3@16:15
[18]720x576p@50Hz@16:9@64:45
[19]1280x720p@50Hz@16:9@1:1
[31]1920x1080p@50Hz@16:9@1:1
[32]1920x1080p@23.98Hz24Hz@16:9@1:1
[63]1920x1080p@119.88/120Hz@16:9@1:1

DP
Detailed Timing
1920x1080@60Hz
2560x1440@60Hz
2560x1440@120Hz
2560x1440@144Hz
2560x1440@280Hz
1920x1080@280Hz
Entablished Timing
720x400@70Hz-IBM.VGA
640x480@60Hz-IBM.VGA
640x480@67Hz-Apple.MacII
640x480@72Hz-VESA
640x480@75Hz-VESA
800x600@56Hz-VESA
800x600@60Hz-VESA
800x600@72Hz-VESA
800x600@75Hz-VESA
832x624@75Hz-Apple.MacII
1024x768@60Hz-VESA
1024x768@70Hz-VESA
1024x768@75Hz-VESA
1280x1024@75Hz-VESA
Standard Timing
1920x1080@60Hz-VESASTD
1680x1050@60Hz-VESASTD
1280x1024@60Hz-VESASTD
1280x720@60Hz-VESASTD
1152x864@75Hz-VESASTD
1280x960@60Hz-VESASTD
1440x900@60Hz-VESASTD
Video Timing
[1]640x480p@59.94Hz@4:3@1:1
[2]720x480p@59.94Hz/60Hz@4:3@8:9
[3]720x480p@59.94Hz/60Hz@16:9@32:27
[4]1280x720p@59.94Hz/60Hz@16:9@1:1
[16]1920x1080p@59.94Hz/60Hz@16:9@1:1[Native="
[17]720x576p@50Hz@4:3@16:15
[18]720x576p@50Hz@16:9@64:45
[19]1280x720p@50Hz@16:9@1:1
[31]1920x1080p@50Hz@16:9@1:1
[32]1920x1080p@23.98Hz24Hz@16:9@1:1
[63]1920x1080p@119.88/120Hz@16:9@1:1



Manufacturer's 1-Year Limited Warranty

The manufacturer warrants that all parts and components are defect free in materials and workmanship for 1 year. This warranty is valid only in accordance with the conditions set forth below:

- 1. The warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated.
- 2. This limited warranty is the only written or express warranty given by the manufacturer. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not applyto you.
- 3. This warranty gives you specific legal rights. You may also have other rights which vary by state.

Procedure for Replacement or Return within the 1 Year:

To return the product for replacement or refund within the 1 year, the original purchaser must pack the product securely and send it postage paid with a description of the reason for replacement or refund, proof of purchase, and include your order number on the package, to the following address:

Deco Gear 80 Carter Drive Edison, NJ 08817

Other contact info

Phone: 844-413-2646

Customer Service Email: customerservice@decogear.com



Need help? Scan the QR code below and click the link to start a live chat with our agents



物料	号码	108.007.XXXXX		
厂内	型号	27T8S	厂外型号	DGOLED27
物料	名称	说明书	品 牌	DECO GEAR
协力	厂商		日 期	2025.08.22
规	格	140x210mm		
要	求	封面封底过光膜 120G铜版纸 彩印 骑马钉		
版	本	V01	设计	蒙嘉欣
确	认		核准	