

# DECOGEAR<sup>®</sup>

## 34" CURVED ULTRAWIDE MONITOR



 
### DGVIEW304

- Keep the monitor away from water sources or damp places, such as bath rooms, kitchens, basements and swimming pools.
- Make sure the monitor is placed on a flat surface. If the monitor falls down, it may cause human injury or device damage.
- Store and use the monitor in a cool, dry and well ventilated place, and keep it away from emission and heat sources.
- Do not cover or block the vent hole in the rear casing, and do not use the product on a bed, sofa, blanket or similar objects.
- The range of the supply voltage of the monitor is printed on the label on the rear casing. If it is impossible to determine the supply voltage, please consult the distributor or local power company.
- If the monitor will not be used for a long period, please cut off the power supply to avoid electric shock in rainy days and damage due to abnormal supply voltage.
- Please use a reliable earthing socket, do not overload the socket, or it may cause fire or electric shock.
- Do not put foreign matters into the monitor, or it may cause short circuits resulting fire or electric shock.
- Do not disassemble or repair this product by self to avoid electric shock. If faults occur, please contact the after-sales service directly.
- Do not pull or twist the power cable forcedly.
- There is a polarizer layer (not a protective film) on the surface of the screen. Do not peel it off, or the product may be damaged and the warranty will be invalid.




## Packing list

- Please check that the package of the monitor contains all parts. If any part is lost, please contact the distributor.
- The color and shape of parts may vary with models. Figures in this User Manual are for reference only.
- Wires supplied may vary with purchased products. Figures in this User Manual are for reference only.



Monitor

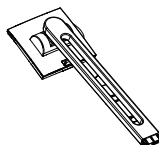 

Stand



 
Base



Screw x1pcs




DP cable



Power adapter x1



 after-sales service card




Wall-mounted screws\*4





Instructions

- Redundant screws can be used as spare screws.

## Installation of base


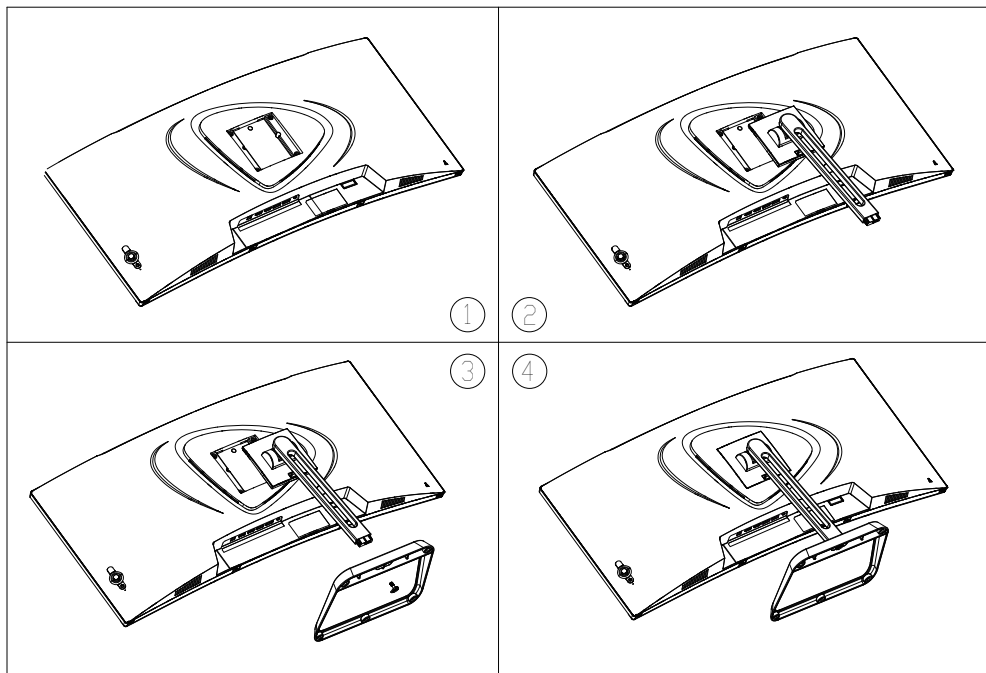 


  Simply hold the stand with hand to stand the monitor upright.

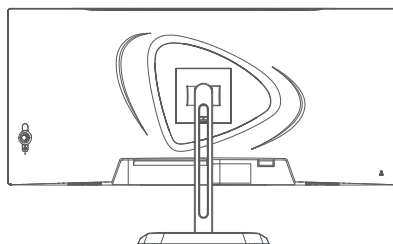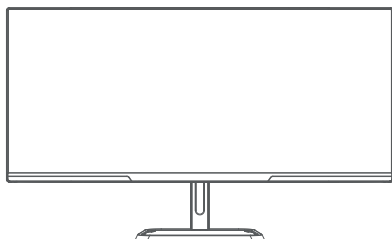

**⚠ Note:** During standing of the whole monitor, do not press the liquid crystal screen with hand to avoid damage to the screen.


 
 
- 1.Place a clean, dry and lint-free cloth on a flat, stable surface.
- 2.Gently lay the monitor on the cloth with the screen facing down.
- 3.Identify the four wall mounting screw holes on the back of the monitor.
- 4.Install the wall mounting bracket (not provided) on the back of the monitor and attach the monitor to the wall according to the mounting bracket's instructions.
- 5.Ensure that all screws (not provided) are tightened and secured.

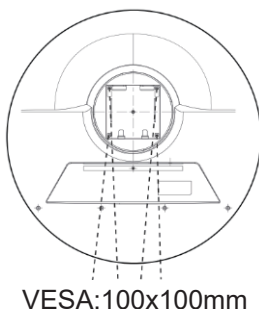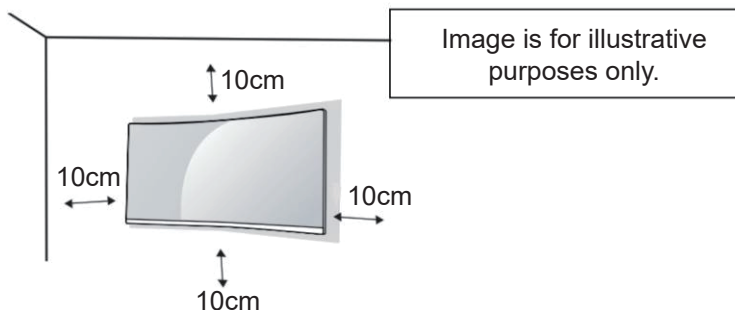

Screw 4 pcs stud ( stud spec: M4, hex standoff, length  $\geq 12\text{mm}$  ) into vesa hole and then connect the wall mount with the 4 stud. Vesa standard is 100\*100mm.


## Notes:

   - Use a wall mounting bracket and screws that conform to VESA standards. Ensure that the box fits appropriately.
- For more information, please refer to the user manual for the wall mounting bracket.
- This monitor model does support wall mounting, however, due to its size, it is recommended to use a stand.

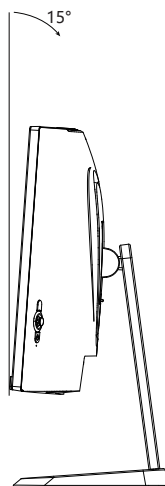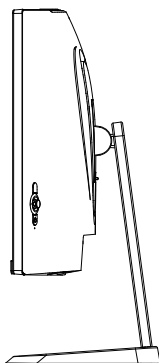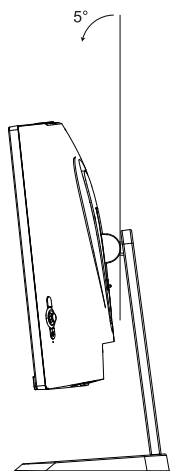

Tilting angle  
-5° - +15°

## Cable connection:

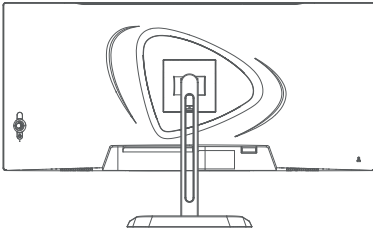 


\* The bottom interface configuration at the back of the monitor varies with products.

\* Note: If the power cable or signal cable is damaged, you must replace it with special soft cables or special components purchased from the manufacturer or maintenance department.

### HDMI interface



 
Use the HDMI cable to connect the HDMI IN interface of the product to the HDMI OUT interface of a PC.

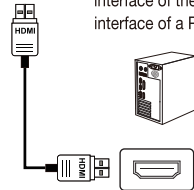

### DP interface



 
Use the DP cable to connect the DP IN interface of the product to the DP OUT interface of a PC.

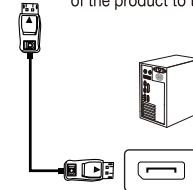

### AUDIO OUT



 
Connect audio outputting devices such as earphones to the AUDIO OUT interface.

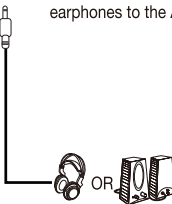


### Power Adapter



 Please connect the power adapter to the power adapter interface of a PC, and plug the other end of the power cable into the power socket.




## Description of buttons

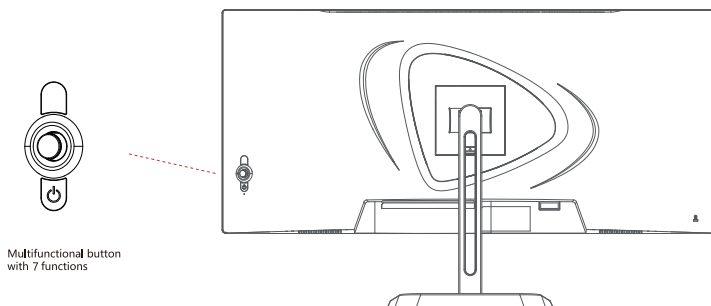 

## Usage of multifunctional button control key

|   |                   |  |
|---|-------------------|--|
|   | Shortcut Buttons  | Crosshair Shortcut   |
| M | Menu              | Activate and confirm the OSD Menu  |
| ^ | UP                | Adjust the parameters upwards in the menu / FPS (Shortcut buttons)           |
| v | Down              | Adjust the parameters down in the menu / Signal switching (Shortcut buttons) |
| A | Brightness Button | When in the menu, go back or log out / Brightness (Shortcut buttons)         |
| ● | Confirm Button    | Menu/Confirm button  |
|   | Power Button      | Press to turn the monitor on/off   |
 
## Menu description

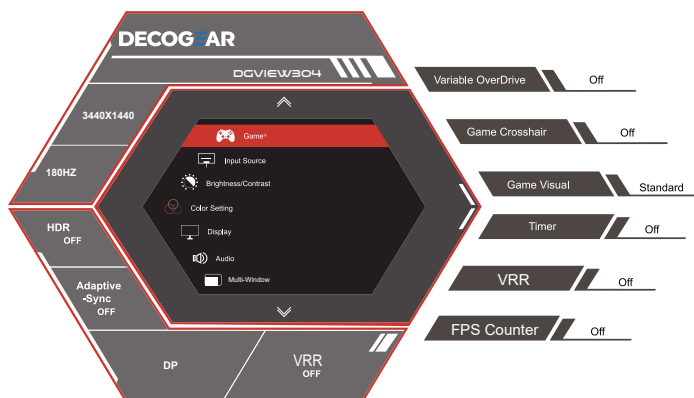

## Display PBP/PIP function

### Multi-source support:

 
At least 2 video resources(such as HDMI and DP) must be connected to the PC computer and the display respectively.

### Enable the PIP/PBP feature

- 1.Press "M" button to pop out the OSD menu.
- 2.Select "Muti-Window" in the menu, to set PIP or PBP mode.

### Adjust the split-screen setting

- 1.PIP Size settings: Select three sizes: Small, Medium, and Large
- 2.Source Configuration: Select the corresponding input device (e.g. DP1, HDMI) in the "Source" option.
- 3.Select "Top Left", "Top Right", "Bottom Left", "Bottom Right" to change small window position.

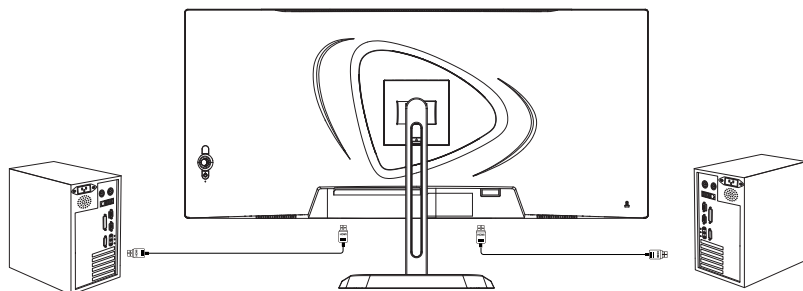

|                      |                    |   |
|----------------------|--------------------|---|
| Game+                | Variable OverDrive | Off/High/Medium/Low                         |
|                      | Game Crosshair     | Off/Mode 1/Mode 2/Mode 3                    |
|                      | Game Visual        | Standard/Movie/RTS/RPG/FPS/MOBA/sRGB/Reader |
|                      | Timer              | Off/30/50/60/90                             |
|                      | VRR                | On/Off                                      |
|                      | FPS Counter        | On/Off                                      |
|                      | Game Light         | On/Off                                      |
| Input Source         | DP                 |   |
|                      | DP                 |   |
|                      | HDMI               |   |
|                      | HDMI               |   |
| Brightness /Contrast | Brightness         | 0-100                                       |
|                      | Contrast           | 0-100                                       |
|                      | HDR                | On/Off                                      |
|                      | DCR                | On/Off                                      |
|                      | Black Equalizer    | 0-100                                       |
| Color Setting        | Gamma              | 1.8/2.0/2.2/2.4/2.6                         |
|                      | Color Temperature  | Normal/Warm/Cool/User                       |
|                      | Sharp pixel        | 0-100                                       |
|                      | Low Blue Light     | 0-100                                       |
|                      | Hue                | 0-100                                       |
|                      | Saturation         | 0-100                                       |
| Display              | Aspect Ratio       | wide screen/4:3/1:1                         |
| Audio                | Mute               | On/Off                                      |
|                      | Volume             | 0-100                                       |
| Multi-Window         | Multi-Window       | off/PIP Mode/PBP 2win                       |
|                      | Sub Win 2 Input    | DP 1/DP 2/HDMI 1/HDMI 2                     |
|                      | PIP Size           | large/medium/Small                          |
|                      | PIP Position       | TopRight/TopLeft/BottomRight/BottomLeft     |
|                      | Swap               |   |
| OSD Setting          | Language           | English                                     |
|                      | OSD H-Position     | 0-100                                       |
|                      | OSD V-Position     | 0-100                                       |
|                      | OSD Transparency   | 0-100                                       |
|                      | OSD Time Out       | 5-100                                       |
|                      | OSD Rotation       | Off/90/180/270                              |
| Other                | FreeSync           | On/Off                                      |
|                      | HDR                | Auto/On/Off                                 |
|                      | ECO Mode           | On/Off                                      |
|                      | Power Indicator    | On/Off                                      |
|                      | MPRT               | On/Off                                      |
|                      | Rest               |   |



|                                   |   |  |
|-----------------------------------|---|--|
| Product Name                      | 34 inch LCD Monitor   |  |
| Product model                     | DGVIEW304   |  |
| Screen Size                       | 34 inch(86.36cm)  |  |
| Aspect Ratio                      | 16:9  |  |
| Viewing Angle                     | 178°(H) / 178°(V)   |  |
| Pixel pitch                       | 0.23175(H) × 0.23175(V)mm   |  |
| Contrast ratio                    | 3000:1 (TYP)  |  |
| Color                             | 16.7M   |  |
| Resolution                        | 3440*1440   |  |
| Refresh Rate                      | 180Hz   |  |
| Power Input                       | DC 24V --- 3A<br>The standard voltage and power supply may vary with countries, please refer to the label at the back of the product. |  |
| Product Dimentions<br>(With base) | 811x213x489mm   |  |
| Tilting angle                     | Forward tilting: -5°±2° ; Backward tilting: 15°±2°  |  |
| Height range                      | /   |  |
| Rotation angle                    | /   |  |
| Vertical angle                    | /   |  |
| Environmental conditions          | Action  | Temperature: 0°C~ 40°C (32°F ~ 104°F)<br>Humidity: 10%~90% RH (non-condensing) |
|                                   | Storage   | Temperature: -20°~ 60° (-4°F ~ 140°F)<br>Humidity: 5%~95% RH (non-condensing)  |



## Manufacturer's 1-Year Limited Warranty

The manufacturer warrants that all parts and components are defect free in materials and workmanship for 1 year. This warranty is valid only in accordance with the conditions set forth below:

1. The warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated.
2. This limited warranty is the only written or express warranty given by the manufacturer. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.
3. This warranty gives you specific legal rights. You may also have other rights which vary by state

### Procedure for Replacement or Return within the 1 Year:

To return the product for replacement or refund within the 1 year, the original purchaser must pack the product securely and send it postage paid with a description of the reason for replacement or refund, proof of purchase, and include your order number on the package, to the following address:

Deco Gear  
80 Carter Drive  
Edison, NJ 08817

#### Other contact info

Phone: 844-413-2646

Customer Service Email: [customerservice@decogear.com](mailto:customerservice@decogear.com)

深圳市微领客科技有限公司

|     |                   |     |          |
|-----|-------------------|-----|----------|
| 料号： | 210-34V61R-002002 |     |          |
| 名称： | 说明书               |     |          |
| 版本： | V1                | 日期： | 20251213 |

技术要求：

- 1、100g铜版纸
- 2、尺寸：140x210mm；
- 3、彩色印刷，骑马钉；
- 4、不得有缺页，漏印，字迹模糊；
- 4、符合RoHS标准。