




## **User Manual**

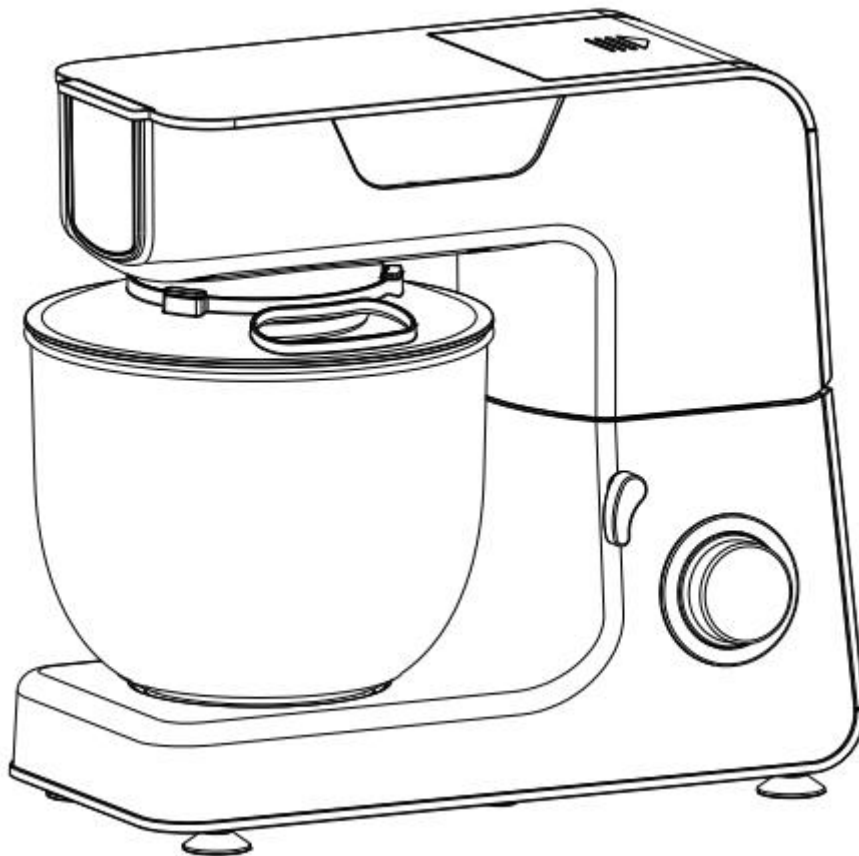

**5.2L Countertop Stand Mixer**

**DGSTMIX01WHT**

[View this product on decogear.com](http://decogear.com)

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

- a) Read all instructions.
- b) To protect against risk of electrical shock do not put main body of appliance in water or other liquid.
- c) This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- d) Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- e) Avoid contacting moving parts.

Keep hands, hair, clothing, as well as spatulas and other utensils away from beaters during operation to reduce the risk of injury to persons, or damage to the mixer.

Never feed food by hand. Always use a food pusher.

- f) Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact the manufacturer at their customer service telephone number for information on examination, repair, or adjustment.
- g) The use of attachments, including canning jars, not recommended by the manufacturer may cause a risk of injury to persons.
- h) Do not use outdoors.
- i) Do not let cord hang over edge of table or counter.
- j) Remove beaters from mixer before washing.
- k) Keep hands and utensils out of container while blending to reduce the

risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.

l) Blades are sharp. Handle carefully.

m) To reduce the risk of injury, never place cutter-assembly blades on base without jar properly attached.

n) Always operate blender with cover in place.

o) When blending hot liquids, remove center piece of two-piece cover.

p) Container must be properly in place before operating appliance.

q) Keep hands and utensils, other than the provided tamper, out of container while blending to reduce the risk of severe injury to persons or damage to the blender. The cover must remain in place when using the tamper through the cover opening. A scraper may be used but must be used only when the blender is not running.

r) Do not use fingers to scrape food away from discharge disc while appliance is operating. Cut type injury may result.

s) Household use only.

t) This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

# SAVE THESE INSTRUCTIONS

## NOTICE!

- Please read through the information and safety advice contained in these operating instructions carefully and thoroughly before you use the stand mixer for the first time.
- To avoid electric shock, do not use this appliance near water.
- Do not kink or clamp the power cord.
- Make sure that the voltage shown on the rating plate corresponds with that of the power supply.
- The rating plate can be found on the bottom of the motor block. The stand mixer is only to be connected to an AC supply.
- The motor must always be switched off before the stand mixer is connected with the power supply.
- Suitable for indoor use only.
- This appliance should not be set up in close proximity to flame, flammable materials (curtains, textiles, etc.), a radiator, an oven or some other heat source.
- Before use, place the appliance on a horizontal, flat surface.
- Place this appliance as close as possible to the power source so that you can disconnect the plug quickly and easily.
- The appliance must be operated with the type of power specified on the rating plate.
- The appliance should only be used for its intended purpose.
- Never operate empty and without supervision.
- Please note that when passing the appliance on to a third party, the operating instructions must be included.
- No liability is accepted for damage due to improper use or the failure to observe our operating instructions / safety notes.
- Switch off the appliance before changing accessories or approaching parts which move in use.

## **Your safety and the safety of others are very important.**

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

You can be killed or seriously injured if you don't immediately follow instructions.

All safety messages will tell you what the potential hazard is, how to reduce the chance of injury, and what can happen if the instructions are not followed.

## **ELECTRICAL REQUIREMENTS**


Volts: 120VAC 60Hz 550W

The wattage rating for your stand mixer is printed on a tag under the mixer base. It is also listed on the trim band. If the power cord is too short, have a qualified electrician or serviceman install an outlet near the appliance. The maximum rating is based on the attachment that draws the greatest load (power). Other recommended attachments may draw significantly less power.

## WARNING

- ◆ Electrical Shock Hazard
- ◆ Plug into a grounded 3 prong outlet.
- ◆ Do not remove ground prong.
- ◆ Do not use an adapter.
- ◆ Do not use an extension cord.
- ◆ Failure to follow these instructions can result in death, fire, electrical shock.

**Before operating this unit, please read these instructions completely.**

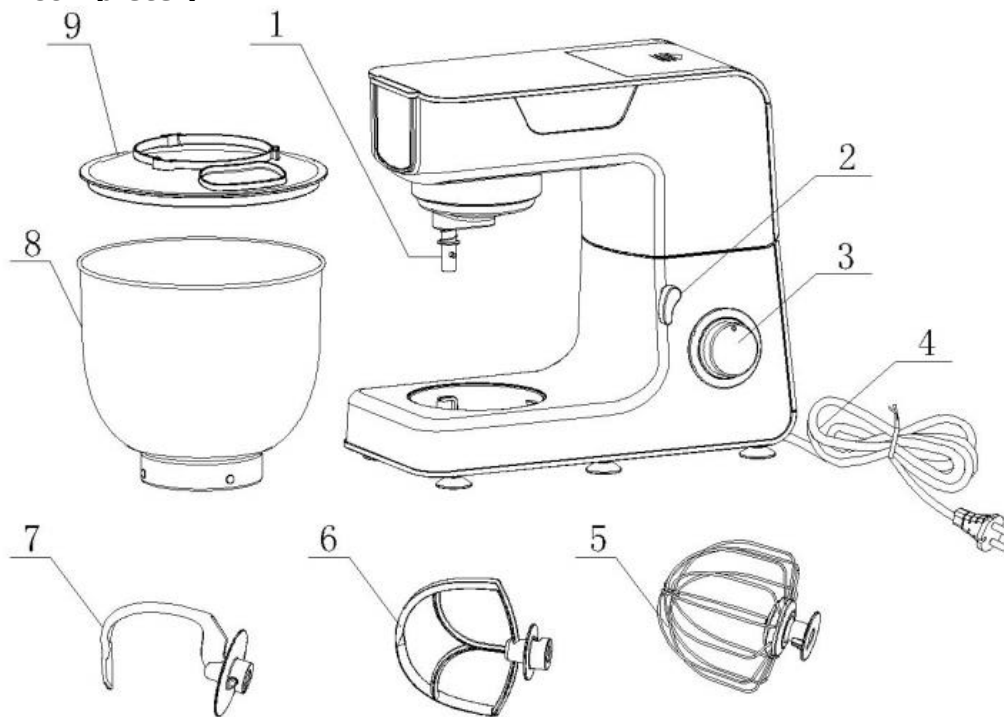

1. Blade Connector

2. Lock Switch

3. Speed Knob

4. Power Cord

5. Whisk

6. Beater

7. Dough Hook

8. Stainless Steel Mixing Bowl

9. Splash Cover

## 5. Egg Whisk

### **WARNING**

- Do not scrape the bowl while the stand mixer is operating.
- The bowl and beater are designed to provide thorough mixing without frequent scraping. Scraping the bowl once or twice during mixing is usually sufficient.
- Turn the stand mixer off before scraping.
- The stand mixer may warm up during use. Under heavy load with extended mixing time, you may not be able to comfortably touch the top of the stand mixer. This is normal.

### **TECHNICAL INFORMATION**

- Voltage/frequency : 120VAC~60Hz (550W)
- Bowl capacity : 5.2 liters
- KB time: 10 Minutes (Never use this appliance constantly for more than 10 minutes!)

### **BEFORE FIRST USE**

All parts of the stand mixer are to be thoroughly cleaned before being used for the first time (see section: Cleaning).

Take out the required length of cable from the cable tidy on the base of the blender and connect the device to the wall outlet.

### **TRIAL USE**

Disengage the locking switch, then lift the machine arm.

Put the mixing bowl onto the base and lock it as the arrowhead notates.

Fix the splash cover onto the mixing blade, then lock the blade into the machine.

Engage the locking switch, then push the upper cover down and as well as the arm. Make sure the arm is fixed together with the base, then rotate the locking switch up to solidly lock the arm.

Plug-in the cord, and turn the switch slowly from speed "1" to speed "8" (try every speed for a few seconds).

After the trial, turn the switch to "OFF".

Turn the locking switch and lift the arm, then take apart the mixing blade from the blade connector and try again.

## **OPERATION GUIDE**

### **To mix or Knead dough:**

- Suggestion flour and water ratio of 5:3
- Dry flour max: 800g
- Dough max: 1.2KG
- Use speed 1 mix for 1 minute then use speed 2 mix 4 minutes for making dough.
- When filling the food in mixing bowl, please ensure that the maximum quantity is not exceeded.
- The dough blade or mixing blade should be used.



### **Whisking egg whites or cream**

- Switch on speed 6 to speed 8, whisk the egg whites without stopping for about 5 minutes, according to the size of the eggs until stiff.
- Maximum quantity 20 eggs.
- Minimum quantity 3 eggs.
- For whipped cream, whip 250ml fresh cream at speed 6 to 8 for about 5 minutes.
- When filling the agitator kettle with fresh milk, cream or other ingredients, please ensure that the maximum quantity is not exceeded.
- The egg beater should be used.





## **Mixing shakes, cocktails or other liquids**



- Mix the ingredients according to the available recipe, from speed 1 to 8 for about 5 minutes.
- Do not exceed the maximum quantity for the mixing bowl.
- The mixer beater should be used.
- Maximum operating time 5 minutes.

## **WARNING:**

**USE ONLY ONE FUNCTION WITH FOOD. DO NOT USE THE 3 FUNCTIONS (Mixer, Blender, Grinder) AT THE SAME TIME!**

## **CLEANING**

Before cleaning, please ensure that the Switch knob is at the "OFF" position and that the plug has been disconnected from the socket.

After use, allow the appliance to cool down before you start to clean it.

To clean the exterior of the appliance, use a moist cloth and a mild detergent.

When cleaning the interior and exterior and protective dust cover do not use any abrasive detergents or alcohol.

To clean the exterior of the appliance, never submerge it in water.

The dough beater, mixer beater, mixing bowl are not dishwasher safe. This will damage the accessories.

The accessories must be cleaned only in warm water and standard dish soap.

The plastic accessories, mixing bowl lid, egg beater can be cleaned with warm water.



## Manufacturer's 1-Year Limited Warranty

The manufacturer warrants that all parts and components are defect free in materials and workmanship for 1 year. This warranty is valid only in accordance with the conditions set forth below:

1. The warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated.
2. This limited warranty is the only written or express warranty given by the manufacturer. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.
3. This warranty gives you specific legal rights. You may also have other rights which vary by state

### Procedure for Replacement or Return within the 1 Year:

To return the product for replacement or refund within the 1 year, the original purchaser must pack the product securely and send it postage paid with a description of the reason for replacement or refund, proof of purchase, and include your order number on the package, to the following address:

Deco Chef  
80 Carter Drive  
Edison, NJ 08817



