

deco gear[®]



**Deco Gear Mechanical
RGB Gaming Keyboard
KMECHY1K**

Thank you for purchasing your new Deco Gear Gaming Keyboard with RGB Lighting (KMECHY1K).

This manual will review product specifications as well as using the RGB light effect functions.

Product Specifications

Features: Mechanical Keyboard with RGB lighting effects, anti-ghost keys, and Cherry MX Red switches.

Dimensions: 17.8 W x 5.9 D x 1.5 H in.

Palm Rest Size: 17.8 W x 2.9 D

Weight: 2.8 lbs (1.25 kg)

Cable Length: 5.9 ft (1.8 m) USB

Switch Life: 50 million+

Available RGB: 12 RGB backlight mode, 4 Side RGB backlight modes, set up to 5 custom backlight modes

Keyboard Customization Software Download

Visit www.decogear.com to download our Windows® Certified Deco Gear Keyboard Customization App to unlock the full personalization capabilities of this keyboard - this includes custom RGB settings, keyboard macros, key mapping, and more!

Search KMECHY1K and find our App in the downloads tab on the product page. Third party anti-virus programs may ask for permissions to allow this program to be installed.

FN Button Combinations

Below is a list of available functions using the FN key:

- FN+F1: Media
- FN+F2: Volume -
- FN+F3: Volume +
- FN+F4: Mute
- FN+F5: CD Stop
- **FN+F6: Play previous**
- FN+F7: Play/Pause
- FN+F8: Play next
- FN+F9: Email
- FN+F10: Web home
- FN+F11: Calculator
- FN+F12: Search

- FN+“1” Only light “ASDW, ↑↓←→, ESC” with RGB
- FN+“2” Only light “ASDW, Ctrl, Shift, Alt, Space, RGQEB, 1-5, Tab, F1-F3, Home, End, PgUp, PgDn” with RGB
- FN+“3” Only light “QWERTASDFGCV 1-7 Ctrl Shift” with RGB
- FN+“4” Only light “QWERTASDF 1-7” with RGB
- FN+“5” Only light “WRASD, Ctrl, Alt, Shift, ↑↓←→” with RGB

- FN+HOME Adjust side RGB backlit mode. 4 backlight modes in total
- FN+INSERT Adjust keycap RGB backlit mode. 12 backlight modes in total
- FN+END Adjust side RGB color under single color mode
- FN+PGUP Adjust brightness of side RGB from 7 levels
- FN+PGDW Adjust RGB running speed for side RGB from 7 levels
- FN+ - /= Adjust RGB running speed for keycap backlights, 7 levels
- FN+PRTSC Set custom RGB mode

Press “FN+PRTSC” to enter into DIY mode.

You will see “M1-M5” five keys are flashing. Choose any one from them and you will find indication RGB is flashing. Then choose keys you would like backlit, then press “FN+PRTSC” to save your set to that chosen “M1-M5” key.

Finally press FN+PRTSC to run your set.

- FN+ Pause Adjust running direction of side RGB
- FN+ ←→ Adjust running direction left and right of keycap RGB
- FN+ ↑↓ Adjust brightness of keycap backlight, has 7 levels of brightness
- FN+ Left WIN Key Lock or Unlock WIN Key

KNOB CONTROLS

The default knob setting is for voice control - rotating the knob clockwise will increase your voice volume while turning it counterclockwise decreases voice volume.

Adjusting RGB Brightness

To adjust the RGB brightness of your keyboard, press the knob once. Then rotate left to decrease brightness and right to increase. Once the min/max level is reached at either end the four LED knob status indicators will flash three times.

To return to the default voice control mode, press the knob down once when finished adjusting brightness.

LED Status Indicators

Next to the control knob are four LED status lights. Below, each "SYMBOL" is listed with associated function:

"1" - NUM LOCK: Press NUM key. When indicator is on, the number pad section of the keyboard is unlocked.

"A" - CAPS LOCK: Indicates if CAPS LOCK is active. Press the CAPS key to toggle.

"↓" - SCROLL LOCK: Press the SCRLK key to toggle the scroll lock function.

"W" - WIN LOCK: Press FN+WIN key to unlock or lock the windows key - useful for when playing games.



Manufacturer's 1-Year Limited Warranty

The manufacturer warrants that all parts and components are defect free in materials and workmanship for 1 year. This warranty is valid only in accordance with the conditions set forth below:

1. The warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated.
2. This limited warranty is the only written or express warranty given by the manufacturer. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.
3. This warranty gives you specific legal rights. You may also have other rights which vary by state

Procedure for Replacement or Return within the 1 Year:

To return the product for replacement or refund within the 1 year, the original purchaser must pack the product securely and send it postage paid with a description of the reason for replacement or refund, proof of purchase, and include your order number on the package, to the following address:

Deco Gear
80 Carter Drive
Edison, NJ 08817