



**34" 3440x1440 180Hz E-LED
Curved Gaming Monitor**

INSTRUCTION MANUAL



MODEL: DGVIEW304

Precaution

Before using this product, please read this User Manual carefully and keep it well

- Keep the monitor away from water sources or damp places, such as bath rooms, kitchens, basements and swimming pools.
- Make sure the monitor is placed on a flat surface. If the monitor falls down, it may cause human injury or device damage.
- Store and use the monitor in a cool, dry and well ventilated place, and keep it away from emission and heat sources.
- Do not cover or block the vent hole in the rear casing, and do not use the product on a bed, sofa, blanket or similar objects.
- The range of the supply voltage of the monitor is printed on the label on the rear casing. If it is impossible to determine the supply voltage, please consult the distributor or local power company.
- If the monitor will not be used for a long period, please cut off the power supply to avoid electric shock in rainy days and damage due to abnormal supply voltage.
- Please use a reliable grounded socket, Do not overload the socket, or it may cause fire or electric shock.
- Do not put foreign matters into the monitor, or it may cause short circuits resulting fire or electric shock.
- Do not disassemble or repair this product by self to avoid electric shock. If faults occur, please contact the after-sales service directly.
- Do not pull or twist the power cable forcedly.
- There is a polarizer layer (not a protective film) on the surface of the screen. Do not peel it off, or the product may be damaged and the warranty will be invalid.

 
Package Content

Packing list


- Please check that the package of the monitor contains all parts. If any part is lost, please contact the distributor.
- The color and shape of parts may vary with models. Figures in this User Manual are for reference only.
- Cables supplied may vary with purchased products. Figures in this User Manual are for reference only.




Monitor

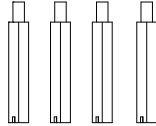


Mount hexagon irons

 


Screws

 


DP cable

 

Power cable

 

Stand

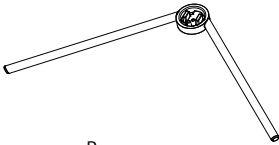 

Base

 


User Manual


Installation

Installation of base


1. Open the carton package, take out the upper and lower foam covers and put them flat on the table top.

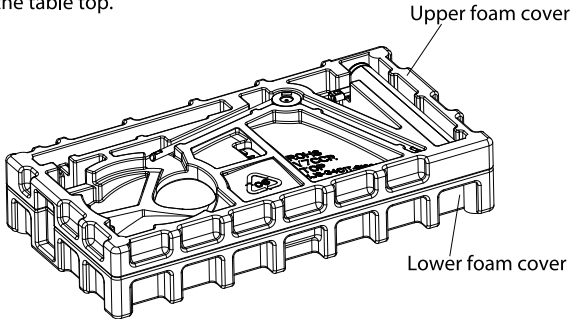

 
2. Remove the upper styrofoam and the inner bag protection bag, and place the lower styrofoam on the desktop, and the machine should not leave the lower styrofoam.

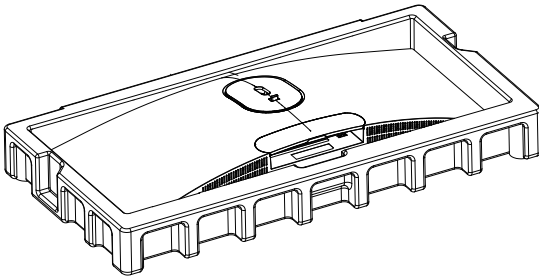

 
3. Tighten the bracket and base together with a screw lock as shown in the figure below.

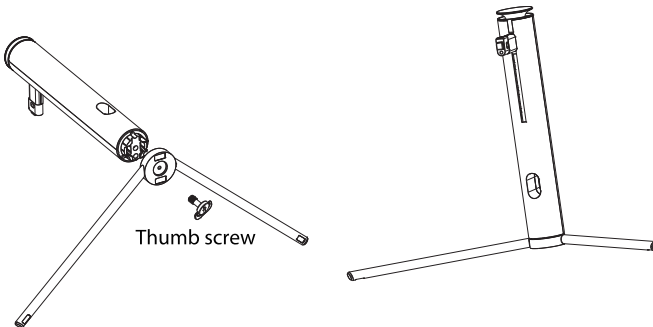


 
4. Move the quick release button up to remove the shaft assembly.

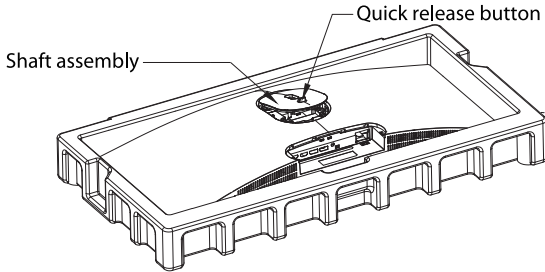

 5. Assemble the shaft assembly to the bracket as shown in the figure and lock it with the accessory screws, Buckle the installed base back to its original position. (Pay attention to check: whether there is any looseness.)

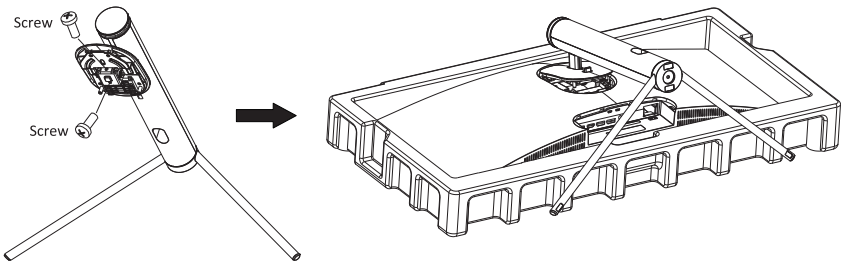

  
6. Simply hold the stand with hand to stand the monitor upright.

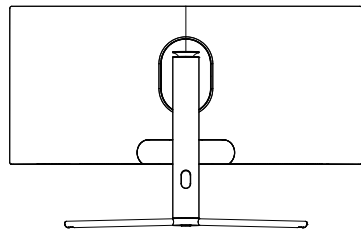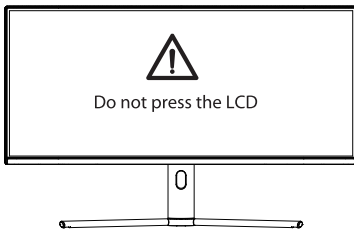


⚠ Note: During standing of the monitor, do not take out the monitor from foams, and do not pinch the liquid crystal screen with hand to avoid damage to the screen.

Installation of mount

 
1. Open the package to take out foams wholly and put them on a flat tabletop.

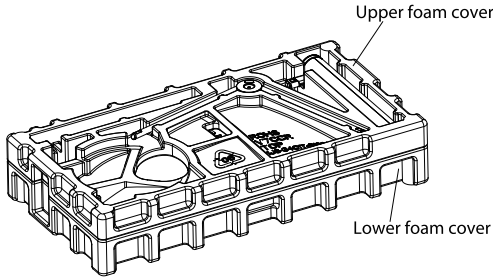

 2. Remove the upper foam cover and put it aside, take out the monitor film bag and put the monitor in the lower foam cover. Toggle the quick-disassembly button of the decorative cover upwards, and remove the decorative cover. Take out four studs for hexagon irons from the accessory bag and to lock them on the rear casing.

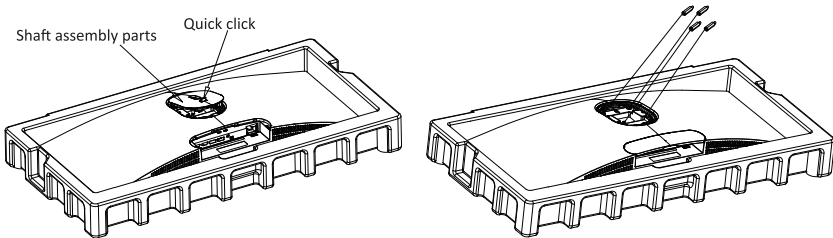


 3. During padlocking of the monitor, do not pinch the screen with the hands to avoid damaging the screen. Install the mount to the mount stud by referring to the user manual of the mount (purchased separately). Tips: The mounting hole distance of the mount for the product is 75x75mm.

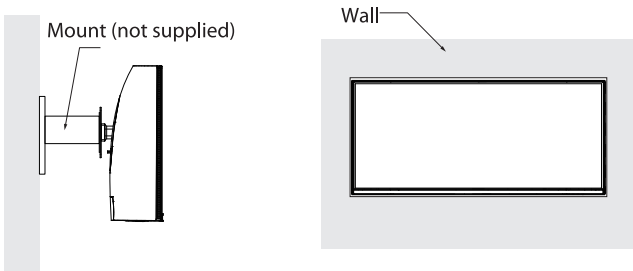


! Notes: To prevent the monitor on the mount from failing, please install it firmly and protect it fully. Do not place or hang any object on the mount, and the using height of the mount should be less than 2 meters.

 
Adjustment of monitor

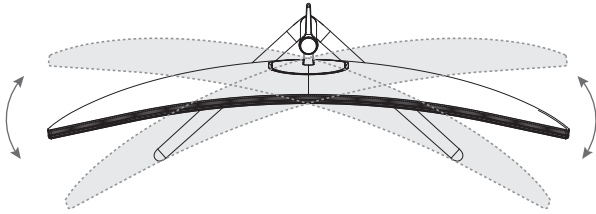

 Rotation angle
 $-15^{\circ}(\pm 2.0^{\circ})$ - $+15^{\circ}(\pm 2.0^{\circ})$

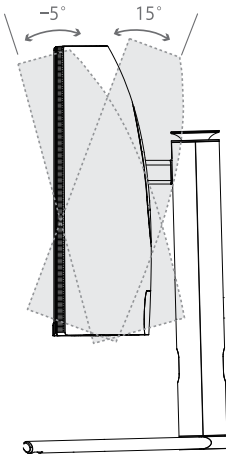

 
Tilting angle
 $-5.0^{\circ} (\pm 2.0^{\circ})$ - $+15^{\circ} (\pm 2.0^{\circ})$

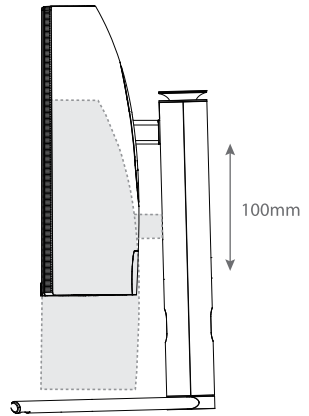

Height adjustment
0- 100mm (± 5.0 mm)


Instructions for use

 Description of buttons

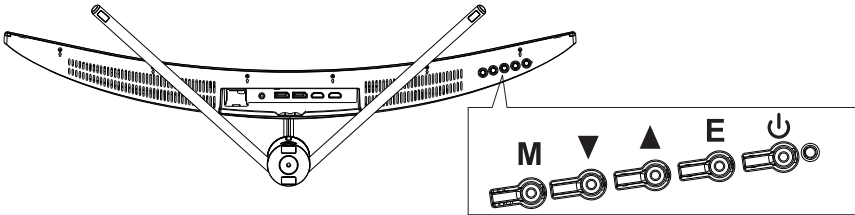


Button	Function
M	Menu button: Press to enter sub-menus/ quickly enter the main menu
▼	Down button: Press to move down in the menu/quickly adjust the Game Crosshair
▲	Up button: Press to move up in the menu/quickly enter the Scene Mode
E	Exit/hot key: Press to return to the previous menu/quickly switch input signals of the port
⏻	Power button: Press to turn on/off the monitor

 Explanation of indicator light

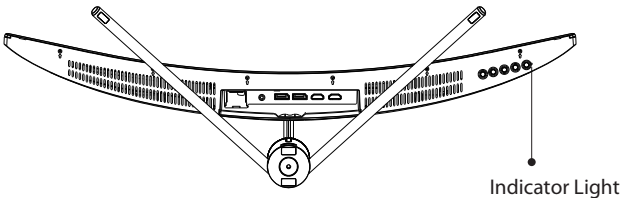

Indicator light : A steady blue light indicates that the power is on and the monitor is operating normally. A red light indicates that no horizontal or vertical sync signal or no video input signal is detected, and the monitor is in standby. Make sure your computer is turned on and functioning properly and check that all video cables are fully plugged in and/or connected to the monitor.

 Cable connection

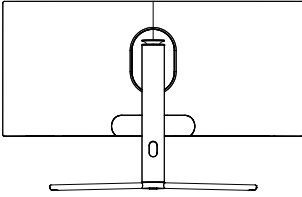


- * The bottom interface configuration at the back of the monitor varies with products.
- * Note: If the power cable or signal cable is damaged, you must replace it with special soft cables or special components purchased from the manufacture or maintenance department.


HDMI interface



 Use the HDMI cable to connect the HDMI IN port of the product to the HDMI OUT port of a PC.

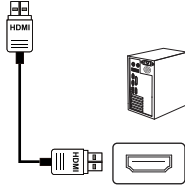

 
Use the HDMI-DVI cable (not included) to connect the HDMI IN port of the product to the DVI OUT port of a PC. (In general, PCs do not transfer video signals to the monitor through the DVI OUT interface, and it is necessary to connect a loudspeaker box additionally to play sounds of PCs.)



DP interface



 
Use the DP cable to connect the DP IN port of the product to the DP OUT port of a PC.

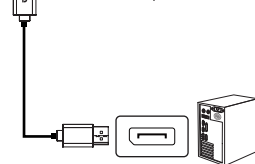

AUDIO OUT



 Connect audio outputting devices such as earphones to the AUDIO OUT port.

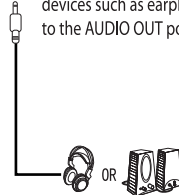

AC IN interface



Please connect the power cable plug to the corresponding port of the monitor, and connect the other end to a properly grounded power outlet.



 
OSD menu

Menu description

- The color and shape of the OSD menu of the actual computer may be slightly different from them shown in the figure.
- Specifications of the OSD menu may change with improvements of functions without prior notice.

The screen display (OSD) menu can be used to adjust settings of the monitor and is shown on the screen after the monitor is powered on and the **M** button is pressed.

1. Press the button **M** to activate the browser screen.

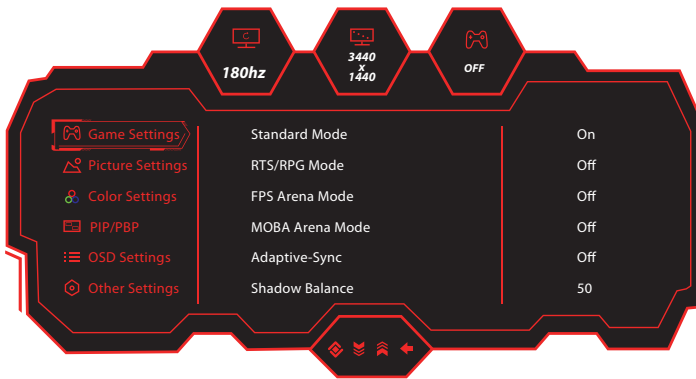

2. Press **▼** or **▲** to scroll through the functions.

- Select the desired function, and press **M** to enter the sub-menu.

- Press **▼** or **▲** to scroll through sub-menus, and press **M** key to select and confirm the desired function.

- Press **▼** or **▲** to select one option, and press **M** to confirm settings and exit from the current menu.

3. Press **E** to exit from the menu screen.

- Functions of the monitor vary with models, and the functions in this manual are for reference only.

Main Menu	Sub Menu	Option
Game Settings	Standard Mode	Off/On
	RTS/RPG Mode	Off/On
	FPS Arena Mode	Off/On
	MOBA Arena Mode	Off/On
	Adaptive-Sync	Off/On
	Shadow Balance	0-100
	Response Time	Off/Normal/Fast/Ultrafast
	Refresh Rate	Off/On
	Game Crosshair	Off/On
	Game Time	Off/On
	Dynamic Brightness	Off/Standard/Expert/Elaboration
	HDR	Off/HDR Standard
	MPRT	Off/On
	Ambient Lighting	Off/On
Picture Settings	Brightness	0-100
	Contrast	0-100
	DCR	Off/On
	Contextual Model	Off/On
	Low Blue Light	0-100
	Sharpness	0-5
	Gamma	1.8/2.0/2.2/2.4/2.6/S.curve
	Aspect Ratio	Wide Screen/4:3/1:1/Auto
Color Settings	Warm	Off/On
	Natural	Off/On
	Cool	Off/On
	User1	Off/On
	User2	Off/On
	User3	Off/On
	Hue	0-100(R/G/B/C/M/Y)
	Saturation	0-100(R/G/B/C/M/Y)


Main Menu	Sub Menu	Option
PIP/PBP	PIP/PBP Mode	Off/PIP Mode/PBP 2Win 1:1
	Sub-Signal Source	DP1/DP2/HDMI1/HDMI2
	Audio Source	Auto/DP1/DP2/HDMI1/HDMI2
	PIP Position	Top Right/Top Left/Bottom Right/Bottom Left
	PIP Size	Small/Medium/Large
	Window Swap	Off/On
OSD Settings	Language	简体中文/English/한국어 / عربي / Portugues do Brasilazil / Deutsch/Nederland/ Suomi/Français/Ελληνικά/Indonesia/Italiano/日本語/Malaysia/Polskie/ Portugues/Русский/Español/ไทย/Українська/Tiếng Việt/繁體中文/Türkçe
	OSD Time Out	5-60
	OSD H-Position	0-100
	OSD V-Position	0-100
	OSD Transparency	0-5
	Hotkey1 Setting	Brightness/Contrast/Volume/Mute/Shadow Balance/Game Crosshair/ Refresh Rate/Game Time/Contextual Model/PIP/PBP Mode/Input Signal /Dynamic Brightness/HDR
	Hotkey2 Setting	
	Hotkey3 Setting	
OSD Lock	Off/On	
Other Settings	Input Signal	Auto/DP1/DP2/HDMI1/HDMI2
	Volume	0-100
	Mute	Off/On
	Auto Power	Off/On
	Eyeshield Remind	Off/On
	Reset	No/Yes
	Information	Input Source: /Resolution: /Mode: /HDR Ver:

Specification

Product Name		LCD Monitor
Product model		DGVIEW304
Screen Size		34 inch (87cm)
Aspect Ratio		21:9
Viewing Angle		178°(H) / 178°(V)
Pixel pitch		0.23175(H)× 0.23175(V)mm
Contrast ratio		4000:1(TYP)
Color		16.7M
Resolution		3440×1440
Refresh Rate		180Hz
Power Input		100-240V~ 50/60Hz, 2.0A The standard voltage and power supply may vary with countries, please refer to the label at the back of the product.
Product Dimensions	Without base	808.65x363.33x123.22mm approx. 6.27 kg
	With base	808.65x510.6x256.08mm approx. 7.72kg
Tilting angle		Forward tilting-5°±2.0° ; Backward tilting+15°±2.0°
Height range		100±5mm
Rotation angle		-15°±2.0°/+15°±2.0°
Vertical angle		N/A
Environmental conditions	Action	Temperature: 0°C~ 40°C (32°F ~ 104°F) Humidity: 10%~90% RH (non-condensing)
	Storage	Temperature: -20°~ 60° (-4°F ~ 140°F) Humidity: 5%~95% RH (non-condensing)



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

 This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)This device may not cause harmful interference, (2)This device must accept any interference received,including interference that may cause undesired operation.



Manufacturer's 1-Year Limited Warranty

The manufacturer warrants that all parts and components are defect free in materials and workmanship for 1 year. This warranty is valid only in accordance with the conditions set forth below:

1. The warranty extends only to the original consumer purchaser and is not transferable. In addition, proof of purchase must be demonstrated.
2. This limited warranty is the only written or express warranty given by the manufacturer. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.
3. This warranty gives you specific legal rights. You may also have other rights which vary by state.

Procedure for Replacement or Return within the 1 Year:

To return the product for replacement or refund within the 1 year, the original purchaser must pack the product securely and send it postage paid with a description of the reason for replacement or refund, proof of purchase, and include your order number on the package, to the following address:

Deco Gear
80 Carter Drive
Edison, NJ 08817

Other contact info

Phone: 844-413-2646
Customer Service Email: customerservice@decogear.com

dec  **gear**®
