

Brief user guide

1 Control panel instructions

Spin Dry Quick Start

- Touch the power key.
- Hold down the "water level" key to enter into the spin only program and begin.

Water level / Powder Level

- Put in correct detergent level according to the selected water level and to the preferred cleanliness of clothes. [washing dose please refer to the indicator diagram]
- If the operation is incorrect, the display will show the wrong information; if E2 is displayed on the screen, it means the cover has not been closed properly.
- Display delay start time.

Information window


- Pressing the "power" key, will show the standard program which is set at 01; Select your program code & required wash/spin time which are shown in an alternate display. Select the required water level by pressing "water level" and entering the correct code as shown on the control panel.
- If the operation is incorrect, the display will show the wrong information; if E2 is displayed on the screen, it means the cover has not been closed properly.
- Display delay start time.

Delay start

- First press Power key.
- Hold down the "Program" delay start key to enter into delay start setting, press the button again to increase the delay start time by 1 hour and repeat until the time required is displayed. The maximum delay start is 24 hours.
- Once you have selected your time setting, setting time and then start work.

Child lock

- In operation status, press and hold the "Water level" and "Program" key at the same time. The display window will show the letters "CL", all buttons will stop working. If the door is opened at this time, the washing machine will come to an immediate halt. If the door is not closed in under 5 seconds the washing machine will drain its water automatically and the machine will sound an alarm.
- In operation status, press and hold the "Water level" and "Program" key at the same time again to unlock the child lock function, then all keys can work again.

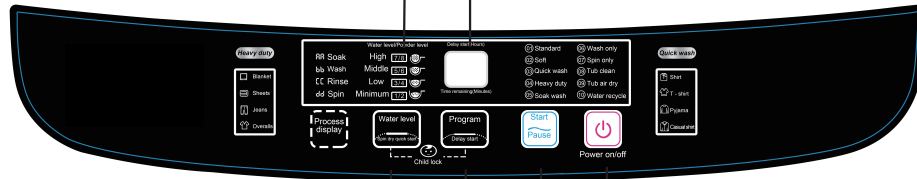

Water level selection

- Press the "Water level" key to enter in to program selection status, press again and repeat to increase the selected water level as required. 1=water level, as: 1L to 8L. (L= level not liters)
- Select suitable water level according to the qty of clothes.

1L/2L	Smallest load of clothing
3L/4L	Lightweight load of clothing
5L/6L	Standard load of clothing
7L/8L	Large amount of clothing or blankets

Program Selection

- Press "program" to enter into program selection status.
- Select suitable wash process according to wash clothes – please always read the label on the clothing before washing.

01 = Standard	Standard wash and dry
02 = Soft	For easy to wring clothes
03 = Quick wash	Fast wash
04 = Heavy duty	Heavy fabrics and tough stains
05 = Soft wash	Soft fabrics and normal stains
06 = Wash only	Only wash function
07 = Spin only	Only spin function
08 = No drain	Close the drain tap
09 = Tub only	Spin Dry the inside tub
10 = Water recirc	Not drain water after wash

Start/Pause

- After plugging in the washing machine and turning on the power, press "Start/ Pause" key to start the program.
- Press it again when machine in operation to pause or change the computer program.


Power on/off

- Press for power on; press again for power off.
- For your safety, if the machine detects any abnormal behavior it will automatically turn itself off. If the machine is idle for 10 minutes it will automatically switch off to conserve electricity. Please turn the machine back on by using the power button and selecting your program.

Please Note:

- If you wish to delay the washing machines progress for any reason all you need to do is push the start/pause button again. Pushing the button again will begin the process; if this does not work, restart the machine by pushing the power button, the internal memory will continue its process automatically.
- After an Alarm has sounded due to improper activity, the machine will automatically switch off after 1 hour.
- If the machine is on standby for 10 minutes or longer in operation, the machine will automatically switch off.
- We sincerely hope you enjoy your brand new easy to use, plug and play washing machine and that it will keep your family safe, clean and protected.

Common faults indication 2

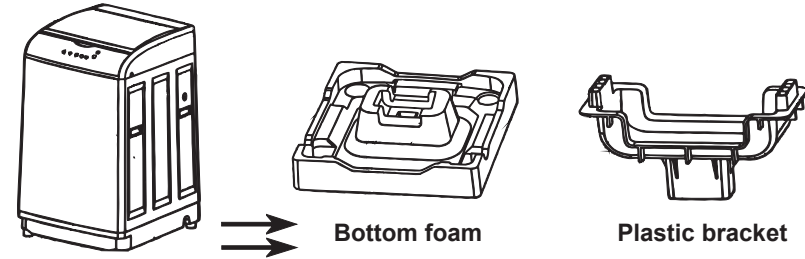

Reminder: Please remove the bottom foam before using the new machine! The plastic bracket is only for keeping the washing machine safe during shipment, the user should remove it.

Common faults

Error Digital Display Information	Error Reason	How to fix
E1 – Water Inlet Fault	<ul style="list-style-type: none"> ● Incoming water has taken over 20 minutes to reach water level. ● The Inlet Valve is blocked or obstructed. ● The Water supply is cut off or the stopcock is open. 	<ul style="list-style-type: none"> ● Check the reason for low water pressure, open and close the cover 1 time to restart operation. ● Remove the blockage from the inlet valve, once done open and close the cover 1 time to restart operation. ● Turn on the water supply or stopcock , once done open and close the cover 1 time to restart operation.
E2 – Drainage Fault	<ul style="list-style-type: none"> ● Water drainage has taken over 5 minutes. ● Drain valve blocked, damaged or faulty. ● Drain pipe is damaged. 	<ul style="list-style-type: none"> ● Reposition the drain pipe for a more smooth water drainage, once done open and close the cover 1 time to restart operation. ● Remove the blockage from the drain valve, once done open and close the cover 1 time to restart operation.
E3- Top Cover Fault	<ul style="list-style-type: none"> ● The cover is open during use. 	<ul style="list-style-type: none"> ● Close the cover.
E4 – Spin Fault	<ul style="list-style-type: none"> ● Clothes are not level or balanced. ● The machine is standing at an incline. 	<ul style="list-style-type: none"> ● Reposition the clothes in the tub so they are balanced and level and close the cover. ● Place the washing machine on a level surface, once done please open and close the cover.
E5 – Water Level Fault	<ul style="list-style-type: none"> ● Water level sensor fault. ● Water Leakage. ● Harness contact is loose. ● Airway tube is loose. 	<ul style="list-style-type: none"> ● Unplug the machine, wait 10 seconds and replug the machine. If issue continues set water level to normal and restart the machine.
E6 – Child Protection	<ul style="list-style-type: none"> ● Machine is Child locked but the cover has been opened. 	<ul style="list-style-type: none"> ● Ensure that your child is a safe distance from the machine and close the cover.
Remarks	If unsolved the problem after use above methods, please contact maintenance dept and professional maintenance personnel, customer can not assemble or disassemble.	